



Faculty of
MECHANICAL ENGINEERING

Department of
TECHNICAL THERMODYNAMICS

**Property Library for
Decamethylcyclopenta-
siloxane (D5)
 $\text{C}_{10}\text{H}_{30}\text{O}_5\text{Si}_5$**

**FluidLAB
LibD5
for MATLAB®**

Prof. Hans-Joachim Kretzschmar
Dr. Ines Stoecker
M. Kunick
M. Nimtz

**Property Library for the Calculation
of Decamethylcyclopentasiloxane (D5)
FluidLAB for MATLAB®
LibD5**

Contents

- 0. Package Contents
- 1. Property Functions
 - 1.1 Calculation Programs
 - 1.2 p,v Diagram
 - 1.3 h,s Diagram
 - 1.4 T,s Diagram
- 2. Application of FluidLAB in MATLAB®
 - 2.1 Installing FluidLAB including LibD5
 - 2.2 Example: Calculation of $h = f(p,t,x)$ in an M-File
 - 2.3 Example: Calculation of $h = f(p,t,x)$ in the Command Window
 - 2.4 Removing FluidLAB including LibD5
- 3. Program Documentation
- 4. Property Libraries for Calculating Heat Cycles, Boilers, Turbines, and Refrigerators
- 5. References
- 6. Satisfied Customers

© Zittau/Goerlitz University of Applied Sciences, Germany
Faculty of Mechanical Engineering
Department of Technical Thermodynamics
Prof. Hans-Joachim Kretzschmar
Dr. Ines Stoecker
Phone: +49-3583-61-1846 or -1881
Fax: +49-3583-61-1846
E-mail: hj.kretzschmar@hs-zigr.de
Internet: www.thermodynamics-zittau.de

0. Package Contents

Zip-file "CD_FluidLAB_LibD5.zip" including the following files:

- | | |
|--------------------------|--|
| FluidLAB_LibD5_Setup.exe | - Installation program for the FluidLAB Add-On
for use in MATLAB [®] |
| LibD5.dll | - DLL with functions of the LibD5 library |

Documentation

- FluidLAB_LibD5_Docu_Eng.pdf - User's Guide

1. Property Functions

1.1 Calculation Programs

“D5” means Decamethylcyclopentasiloxane ($C_{10}H_{30}O_5Si_5$)

Functional Dependence	Function Name	Call from Fortran program	Call in DLL LibD5 as parameter	Property or Function	Unit of the result
$c_p = f(p, t, x)$	cp_ptx_D5	CPPTXD5(P,T,X)	C_CPPTXD5(CP,P,T,X)	Specific isobaric heat capacity	kJ/(kg K)
$c_v = f(p, t, x)$	cv_ptx_D5	CVPTXD5(P,T,X)	C_CVPTXD5(CV,P,T,X)	Specific isochoric heat capacity	kJ/(kg K)
$\left(\frac{\partial p}{\partial T}\right)_v = f(p, t, x)$	dpdtv_ptx_D5	DPDPTVD5(P,T,X)	C_DPDPTVD5(DPDT,P,T,X)	Derivative of pressure with respect to temperature (at constant specific volume)	kPa/K
$\left(\frac{\partial p}{\partial v}\right)_T = f(p, t, x)$	dpdvt_ptx_D5	DPDPTVD5(P,T,X)	C_DPDVTD5(DPDV,P,T,X)	Derivative of pressure with respect to specific volume (at constant temperature)	kPa/(m³/kg)
$h = f(p, t, x)$	h_ptx_D5	HPTXD5(P,T,X)	C_HPTXD5(H,P,T,X)	Specific enthalpy	kJ/kg
$\kappa = f(p, t, x)$	kappa_ptx_D5	KAPPAPTXD5(P,T,X)	C_KAPPAPTXD5(KAPPA,P,T,X)	Isentropic exponent	-
$p_s = f(t)$	ps_t_D5	PSTD5(T)	C_PSTD5(PS,T)	Vapor pressure from temperature	bar
$\rho = f(p, t, x)$	rho_ptx_D5	RHOPTXD5(P,T,X)	C_RHOPTXD5(RHO,P,T,X)	Density	kg/m³
$s = f(p, t, x)$	s_ptx_D5	SPTXD5(P,T,X)	C_SPTXD5(S,P,T,X)	Specific entropy	kJ/(kg K)
$t = f(p, h)$	t_ph_D5	TPHD5(P,H)	C_TPHD5(T,P,H)	Backward function: Temperature from pressure and enthalpy	°C
$t = f(p, s)$	t_ps_D5	TPSD5(P,S)	C_TPSD5(T,P,S)	Backward function: Temperature from pressure and entropy	°C
$t_s = f(p)$	ts_p_D5	TSPD5(P)	C_TSPD5(TS,P)	Boiling temperature from pressure	°C
$u = f(p, t, x)$	u_ptx_D5	UPTXD5(P,T,X)	C_UPTXD5(U,P,T,X)	Specific internal energy	kJ/kg
$v = f(p, t, x)$	v_ptx_D5	VPTXD5(P,T,X)	C_VPTXD5(V,P,T,X)	Specific volume	m³/kg
$w = f(p, t, x)$	w_ptx_D5	WPTXD5(P,T,X)	C_WPTXD5(W,P,T,X)	Isentropic speed of sound	m/s
$x = f(p, h)$	x_ph_D5	XPHD5(P,H)	C_XPHD5(X,P,H)	Backward function: Vapor fraction from pressure and enthalpy	kg/kg

Functional Dependence	Function Name	Call from Fortran program	Call in DLL LibD5 as parameter	Property or Function	Unit of the result
$x = f(p,s)$	x_ps_D5	XPSD5(P,S)	C_XPSD5(X,P,S)	Backward function: Vapor fraction from pressure and entropy	kg/kg
$Z = f(p,t,x)$	Z_ptx_D5	ZPTXD5(P,T,X)	C_ZPTXD5(W,P,T,X)	Compression factor	-

Units:

t in °C
 p in bar
 x in (kg of saturated steam)/(kg wet steam)

Range of validity

Temperature range: from $t = 26.85^\circ\text{C}$ to 399.85°C
Pressure range: from $p = 0.00001$ bar to 300 bar

Reference state

$h = 0$ kJ/kg and $s = 0$ kJ/(kg K) at $t_B = 210.9^\circ\text{C}$ on the boiling curve ($x = 0$; $p_s = p_N = 1.01325$ bar)

Details on the vapor fraction x

The wet steam region is calculated automatically by the subprograms. For this purpose the following fixed details on the vapor fraction x are to be considered:

If the state point to be calculated is located in the single-phase region (liquid or superheated steam) $x = -1$ must be entered as a pro-forma value. Here the backward functions will also result in $x = -1$.

If the state point to be calculated is located in the two phase region (wet steam), either the value 0 or 1 has to be entered for x ($x = 0$ for boiling liquid, $x = 1$ for saturated steam). Here the backward functions will result in $x = 0$ or $x = 1$.

If the state point to be calculated is located in the two phase region, it is adequate to enter either the given value for t and $p = -1000$, or the given value for p and $t = -1000$, plus the value for x between 0 and 1. When calculating wet steam and p and t and x are entered as given values, the program will consider p and t to be appropriate to represent the saturation-pressure curve. If it is not the case the calculation for the quantity of the chosen function to be calculated results in -1000 .


Wet steam region: Temperature range from $t = 26.85\text{ °C}$ to $t_c = 346.0846\text{ °C}$

Pressure range from $p_s(26.85\text{ °C}) = 0.001477917\text{ bar}$ to $p_c = 11.6146\text{ bar}$


Hint.

If the calculation results in -1000 , the entered values represent a state point beyond the range of validity of LibD5. For further information on each function and its range of validity see Chapter 3. The same information may also be accessed via the online help pages.


1.2 p,v -Diagram

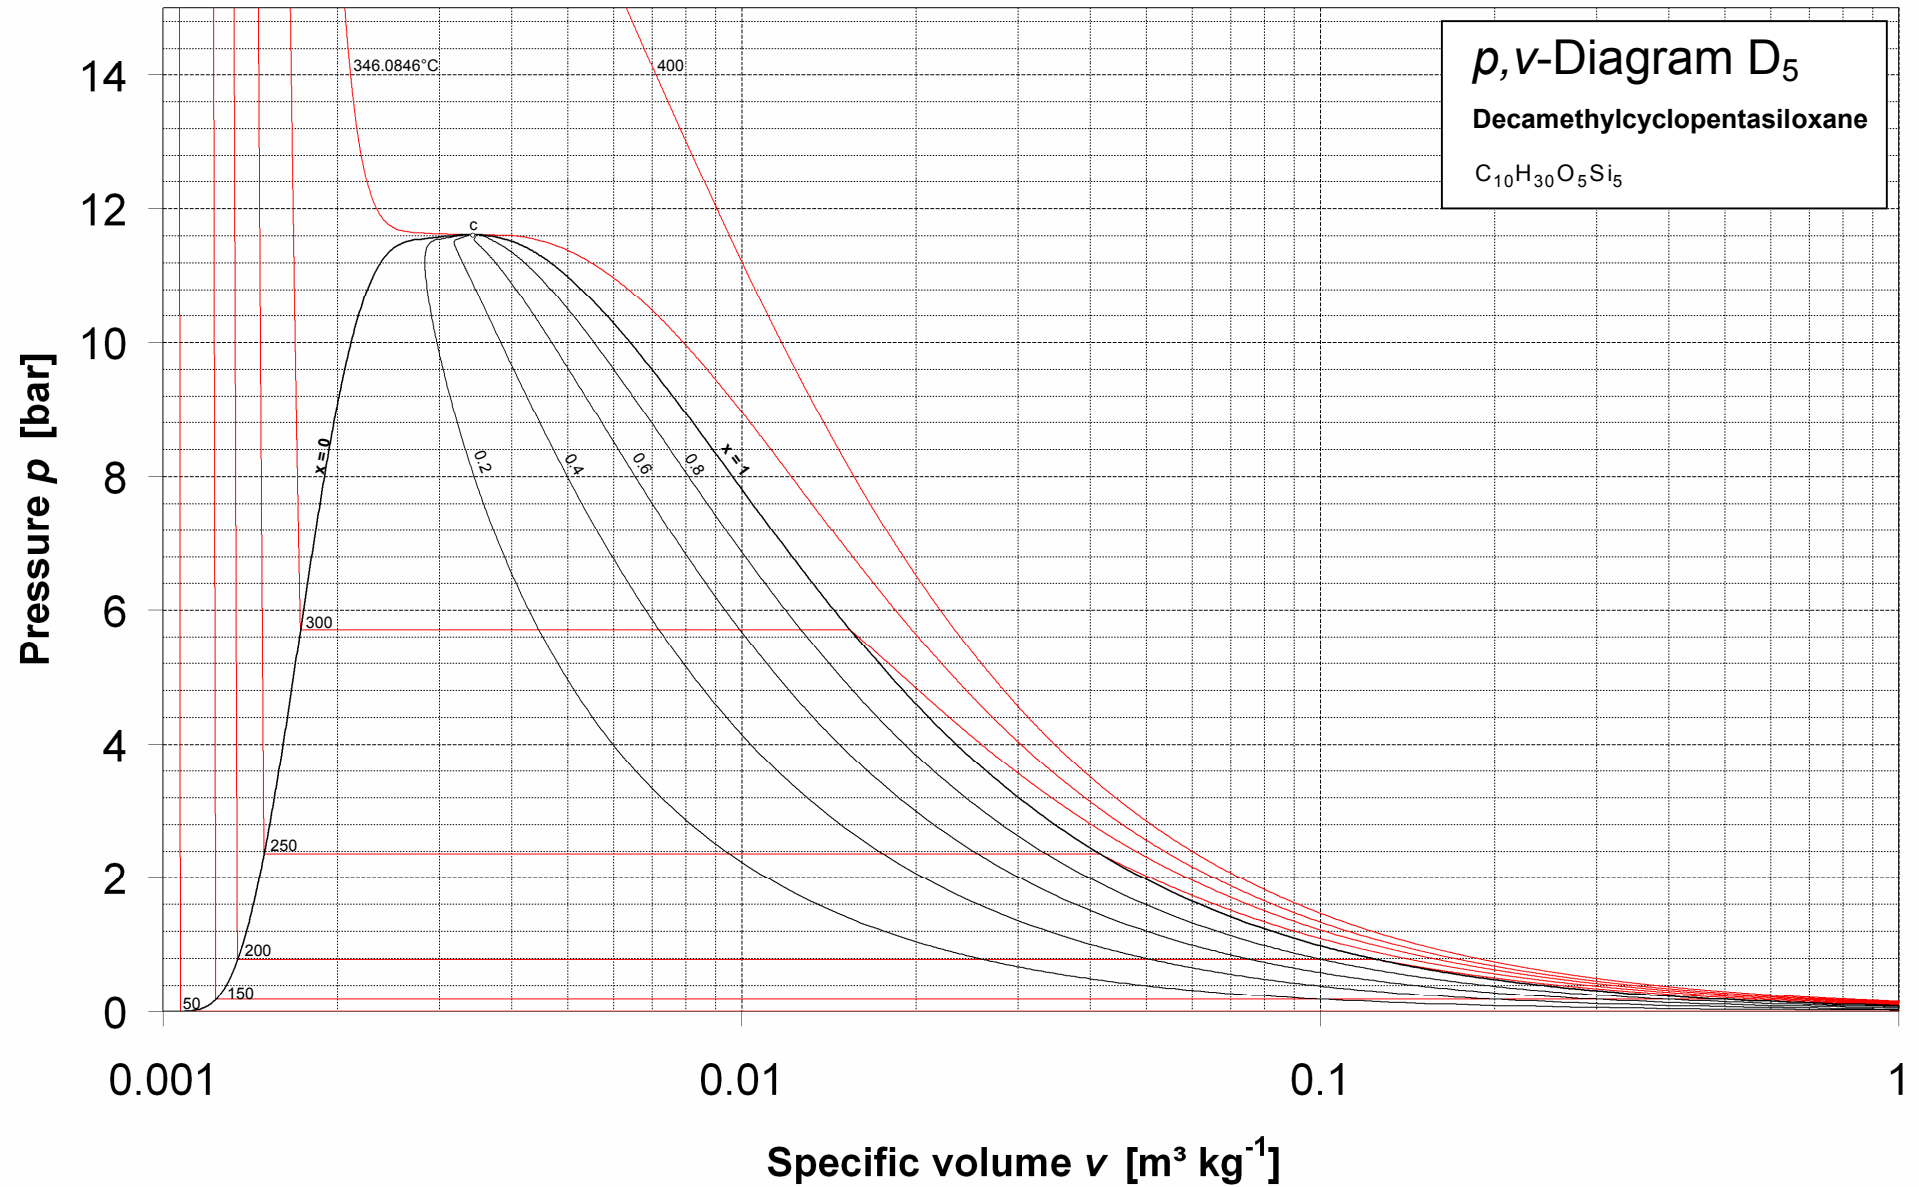

1.3 h,s -Diagram

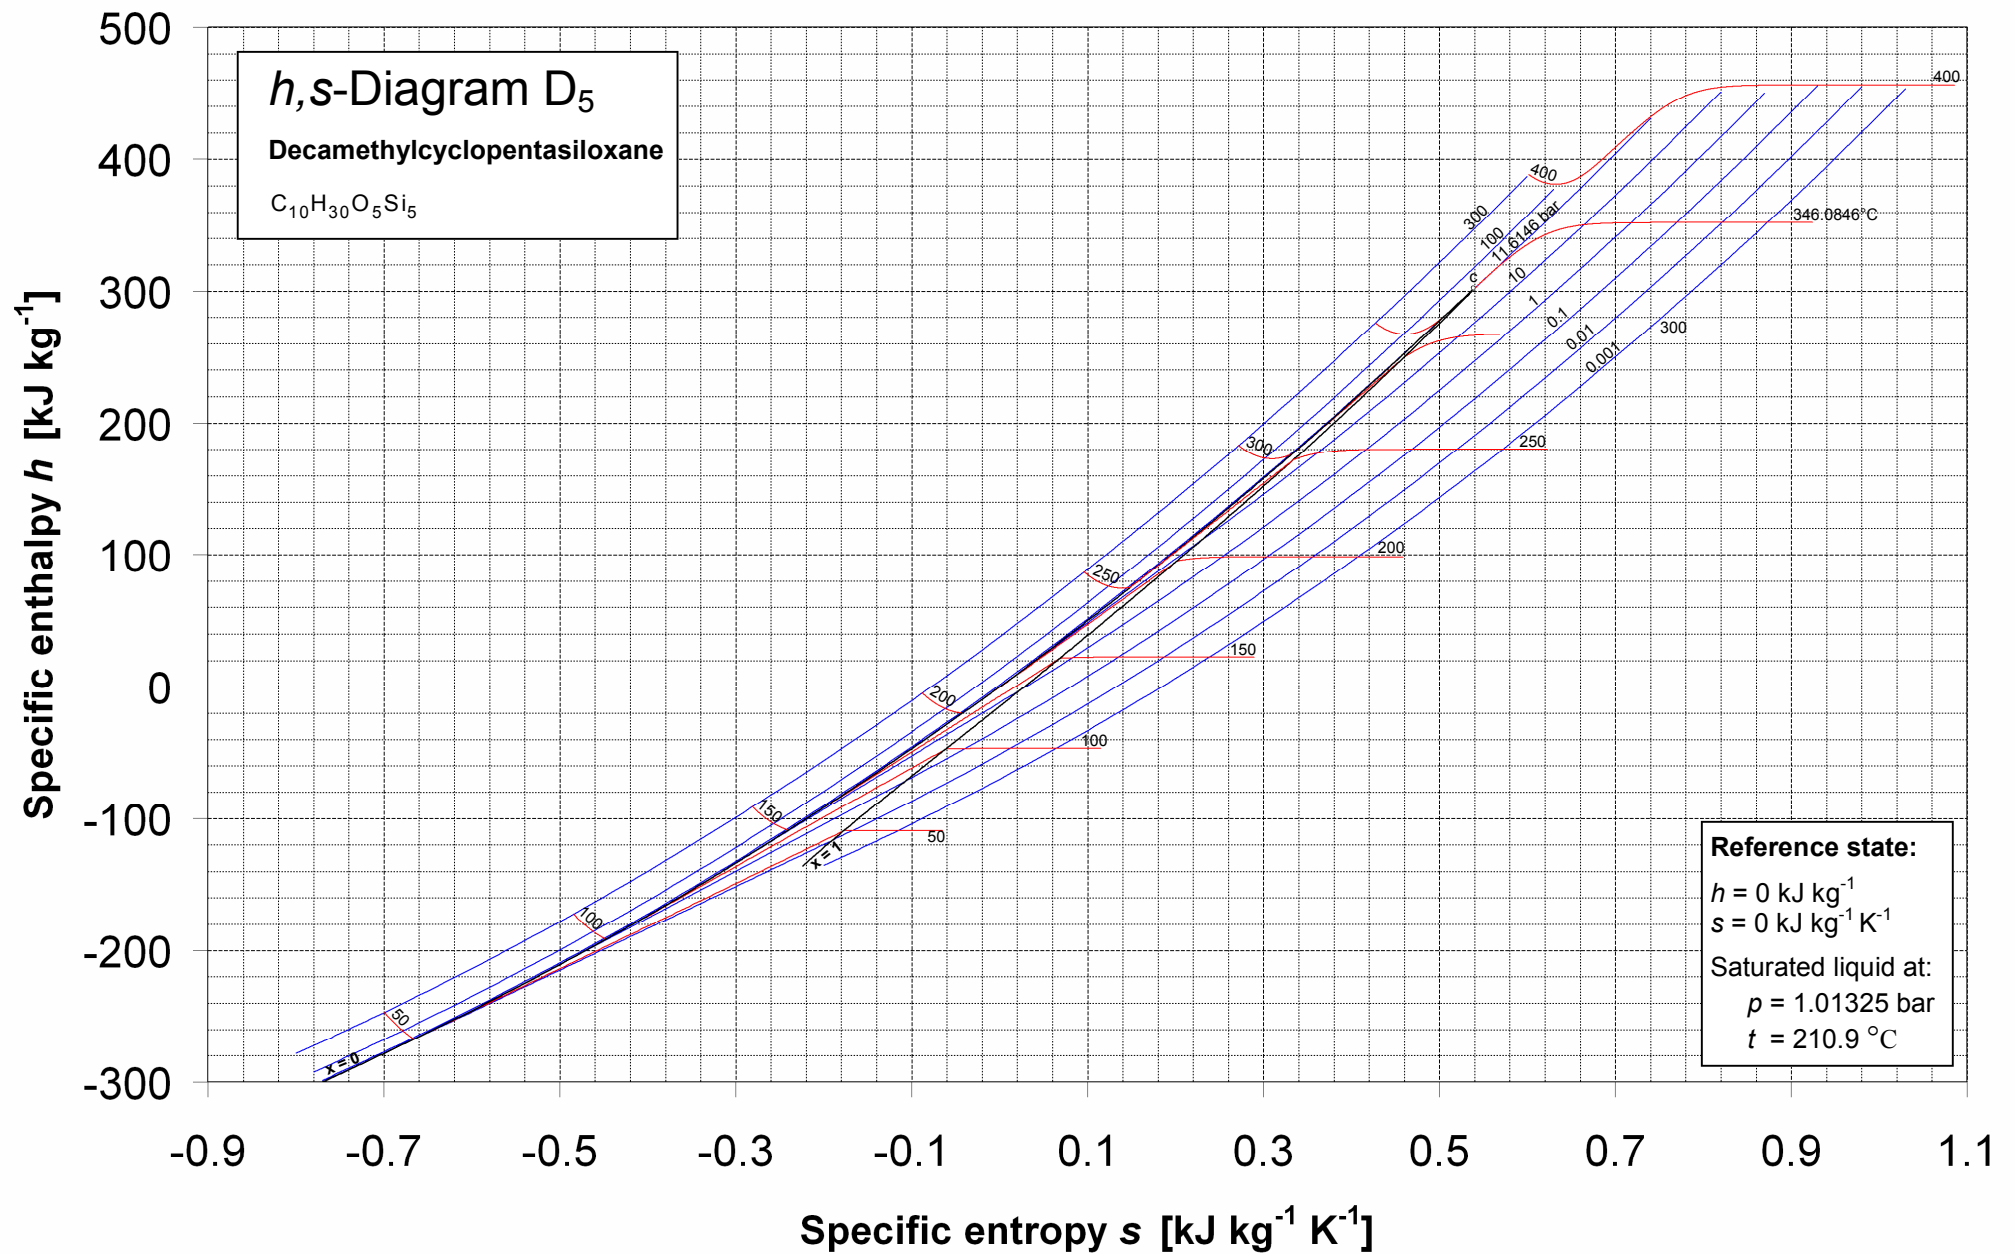

1.4 T,s-Diagram

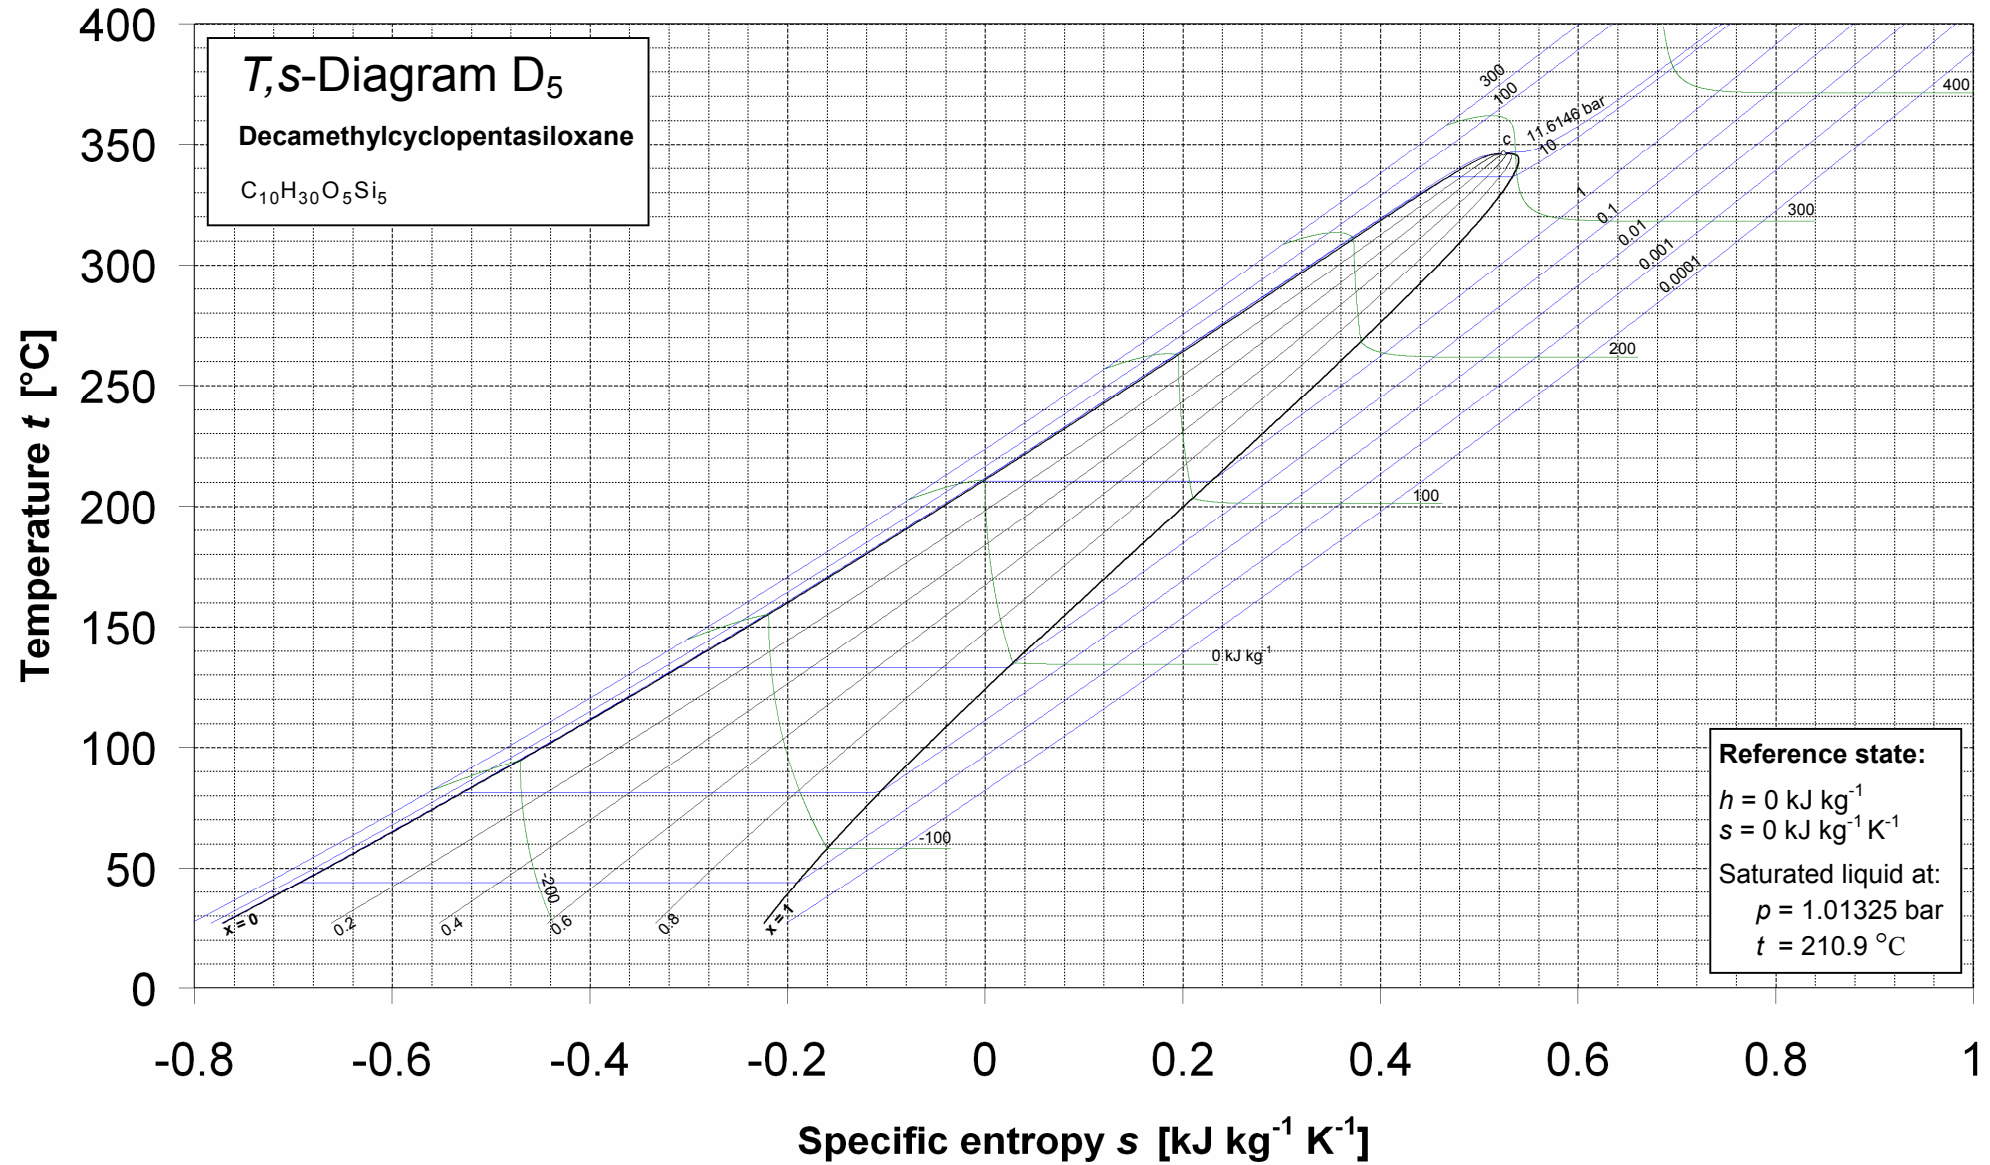

2 Application of FluidLAB in MATLAB®

The FluidLAB Add-In has been developed to calculate thermodynamic properties in MATLAB® more conveniently. Within MATLAB® it enables the direct call of functions relating to Decamethylcyclopentasiloxane from the LibD5 property library.

2.1 Installing FluidLAB including LibD5

This section describes the installation of FluidLAB including the LibD5 property library.

Before you begin, it is best to close any Windows® applications, since Windows® may need to be rebooted during the installation process.

After you have downloaded and extracted the zip-file "CD_FluidLAB_LibD5.zip", you will see the folder

CD_FluidLAB_LibD5

in your Windows Explorer®, Norton Commander® or other similar program you are using.

Open this folder by double-clicking on it.

In this folder you will see the following three files:

FluidLAB_LibD5_Docu_Eng.pdf

FluidLAB_LibD5_Setup.exe

LibD5.dll.

In order to run the installation of FluidLAB including the LibD5 property library, double-click on the file

FluidLAB_LibD5_Setup.exe.

Installation may start with a window noting that all Windows® programs should be closed. When this is the case, the installation can be continued. Click the "Next >" button.

In the following dialog box, "Destination Location", the default path offered automatically for the installation of FluidLAB is

C:\Program Files\FluidLAB\LibD5

By clicking the "Browse..." button, you can change the installation directory before installation (see figure below).

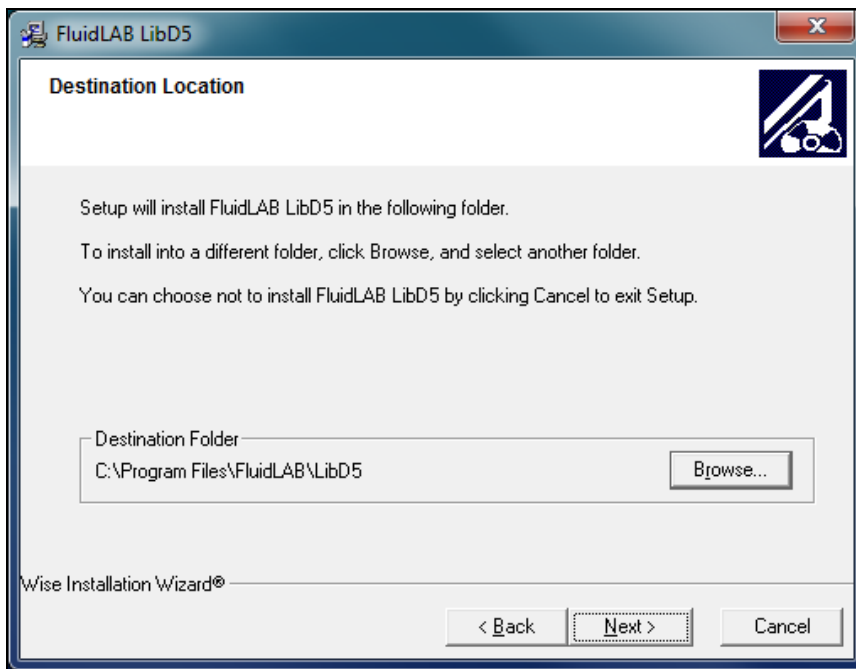


Figure 2.1: "Destination Location"

If you wish to change directories, click the "Browse..." button and select your desired directory. The instructions in this documentation refer to the stated default directory. Leave this window by clicking the "Next >" button.

The dialog window "Start Installation" pops up. Click the "Next >" button to continue installation. The FluidLAB files are now being copied into the created directory on your hard drive. Click the "Finish >" button in the following window to complete installation.

The installation program has copied the following files for LibD5 into the directory "C:\Program Files\FluidLAB\LibD5":

advapi32.dll	LibD5.dll
Dformd.dll	msvc60.dll
Dforrt.dll	msvcrt.dll
INSTALL.LOG	Unwise.exe
LC.dll	Unwise.ini

- MATLAB®-Interface-Program for calculable functions

cp_ptx_D5	t_ph_D5
cv_ptx_D5	t_ps_D5
dptdv_ptx_D5	ts_p_D5
dpdvt_ptx_D5	u_ptx_D5
h_ptx_D5	v_ptx_D5
Kappa_ptx_D5	w_ptx_D5
ps_t_D5	x_ph_D5
rho_ptx_D5	x_ps_D5
s_ptx_D5	Z_ptx_D5

Now, you have to overwrite the file "LibD5.dll" in your FluidLAB directory with the file of the same name provided on your CD with FluidLAB.

To do this, open the CD in "My Computer" and click on the file "LibD5.dll" in order to highlight it.

Then click on the "Edit" menu in your Explorer and select "Copy".

Now, open your FluidLAB directory (the standard being C:\Program Files\FluidLAB\LibD5) and insert the file "LibD5.dll" by clicking the "Edit" menu in your Explorer and then select "Paste".

Answer the question whether you want to replace the file by clicking the "Yes" button. Now, you have overwritten the file "LibD5.dll" successfully and the property functions are available in MATLAB®.

Licensing the LibD5 Property Library

The licensing procedure must be carried out when the prompt message appears. In this case, you will see the "License Information" window for LibD5 (see figure below).

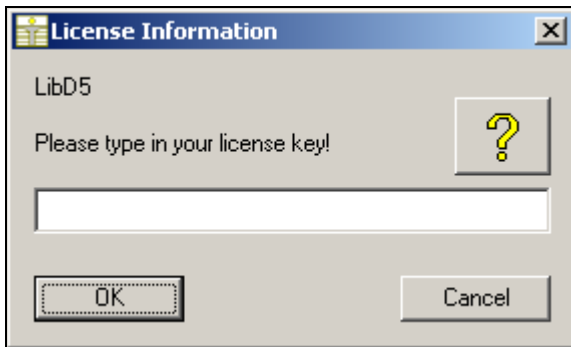


Figure 2.2: "License Information" window

Here you are asked to type in the license key which you have obtained from the Zittau/Goerlitz University of Applied Sciences. If you do not have this, or have any questions, you will find contact information on the "Content" page of this User's Guide or by clicking the yellow question mark in the "License Information" window. Then the following window will appear:

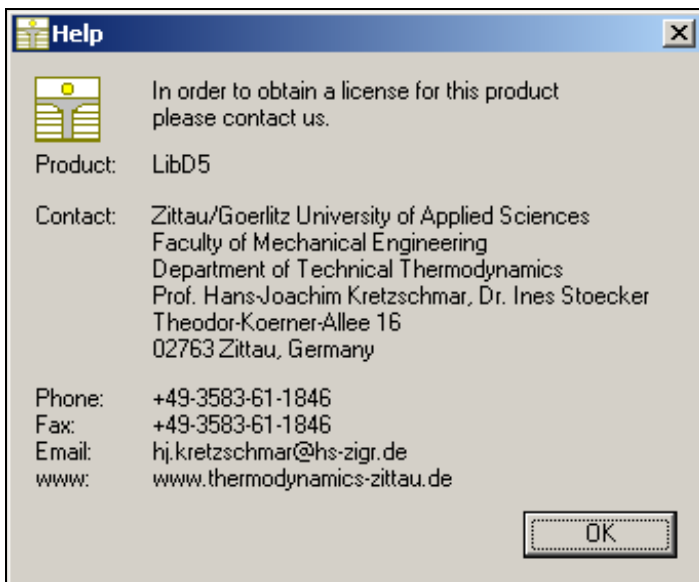


Figure 2.3: "Help" window

If you do not enter a valid license it is still possible to use MATLAB[®] by clicking "Cancel". In this case, the LibD5 property library will display the result "-11111111" for every calculation.

The "License Information" window will appear every time you use FluidLAB LibD5 until you enter a license code to complete registration. If you decide not to use FluidLAB LibD5, you can uninstall the program following the instructions given in section 2.4 of this User's Guide.

2.2 Example: Calculation of $h = f(p, t, x)$ in an M-File

Now we will calculate, step by step, the air-specific enthalpy h as a function of pressure p , temperature t and vapor fraction x using FluidLAB.

Please carry out the following instructions:

- Start Windows Explorer®, Total Commander®, My Computer or another file manager program. The following description refers to Windows Explorer®.
- Your Windows Explorer® should be set to "Details" for easier viewing. Click the "Views" button and select "Details."
- Switch into the program directory of FluidLAB, in which you will find the folder "LibD5"; it is generally saved under: "C:\Program Files\FluidLAB"
- Create the folder "LibD5_Example" by clicking on "File" in the Explorer® menu, then "New" in the menu which appears and afterwards selecting "Folder". Name the new folder "LibD5_Example."
- You will now see the following window:

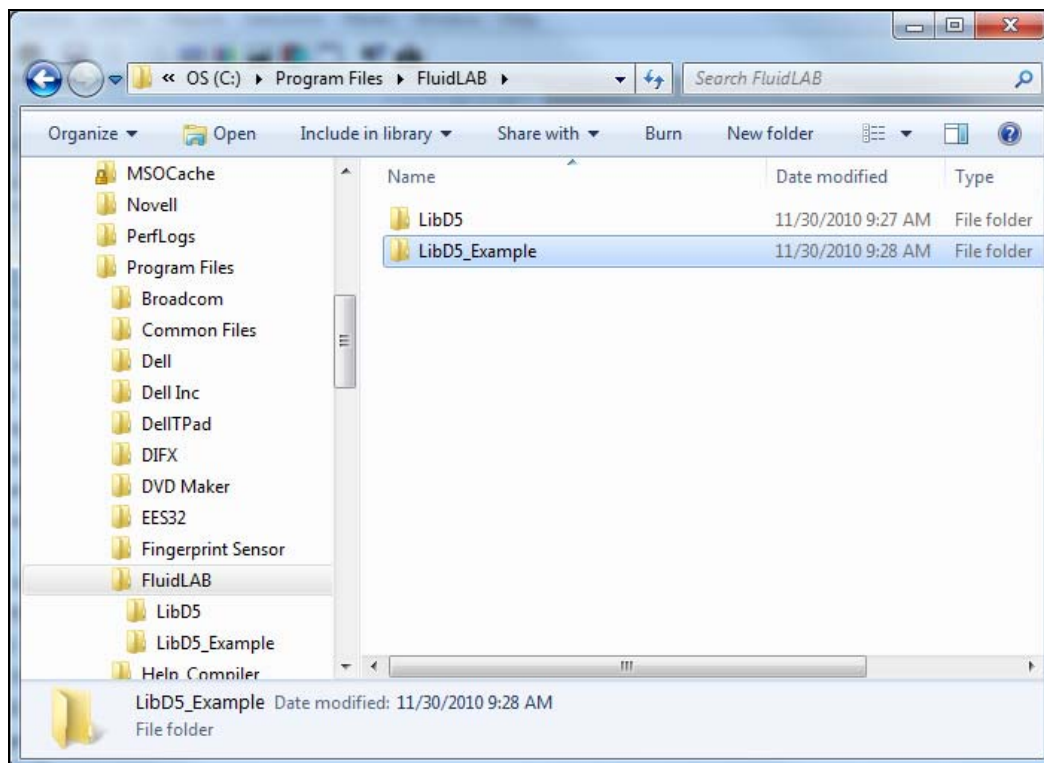


Figure 2.4: Folders "LibD5" and "LibD5_Example"

- Switch into the directory "LibD5" within "FluidLAB", the standard being "C:\Program Files\FluidLAB\LibD5."

- You will see the following window:

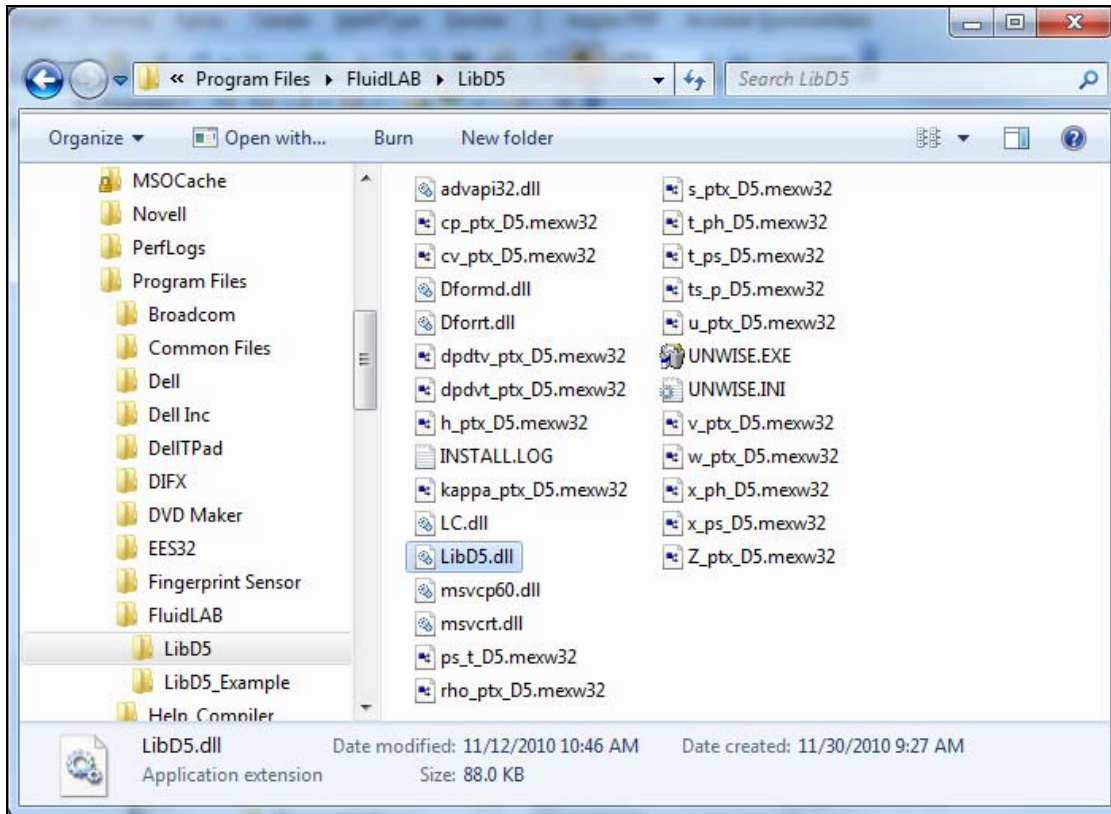


Figure 2.5: Contents of the folder "LibD5"

You will now have to copy the following files into the directory "C:\Program Files\FluidLAB\LibD5_Example" in order to calculate the function $h = f(p, t, x)$.

- The following eight files are needed:
 - "advapi32.dll"
 - "Dformd.dll"
 - "Dforrt.dll"
 - "h_ptx_D5.mexw32"
 - "LC.dll"
 - "LibD5.dll"
 - "msvc60.dll"
 - "msvcrt.dll."
- Click the file "h_ptx_D5.mexw32", then click "Edit" in the upper menu bar and select "Copy".
- Switch into the directory "C:\Program Files\FluidLAB\LibD5_Example", click "Edit" and then "Paste".
- Repeat these steps in order to copy the other files listed above. You may also select all the above-named files and then copy them as a group (press the Control button to enable multiple markings).

- You will see the following window:

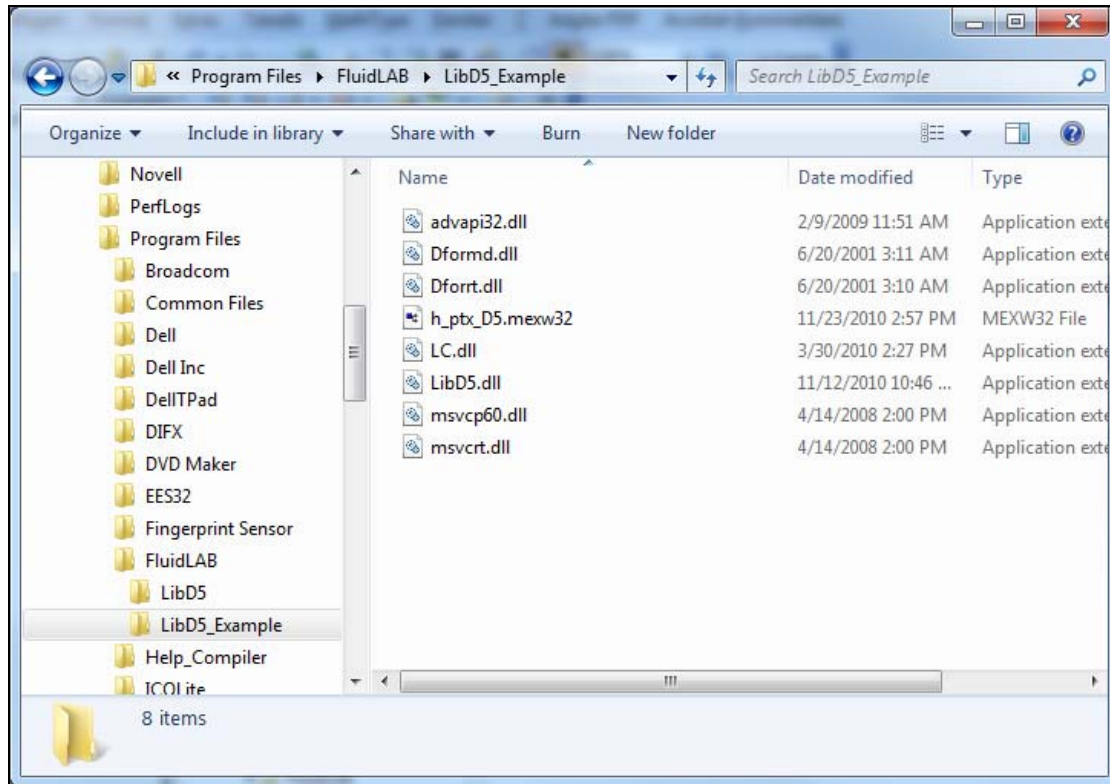


Figure 2.6: Contents of the folder "LibD5_Example"

- Start MATLAB® (if you have not started it before).
- Click the button marked in the next figure in order to open the folder "LibD5_Example" in the "Current Folder" window.

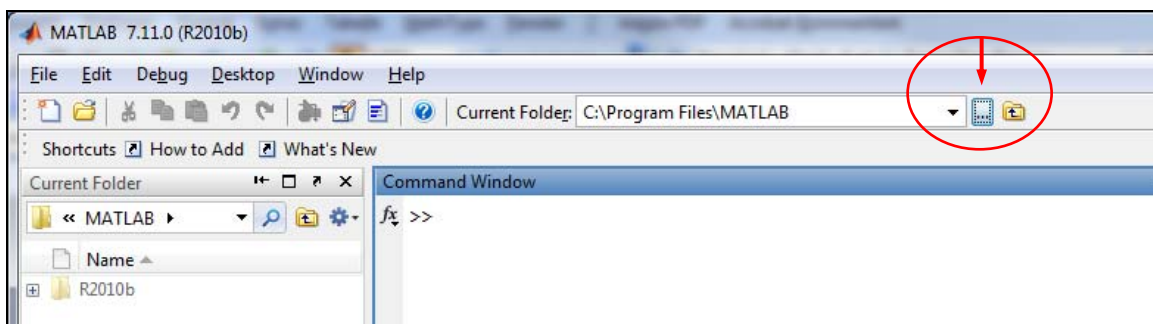


Figure 2.7: Selection of the working directory

- Find and select the directory "C:\Program Files\FluidLAB\LibD5_Example" in the pop-up menu (see the following image).

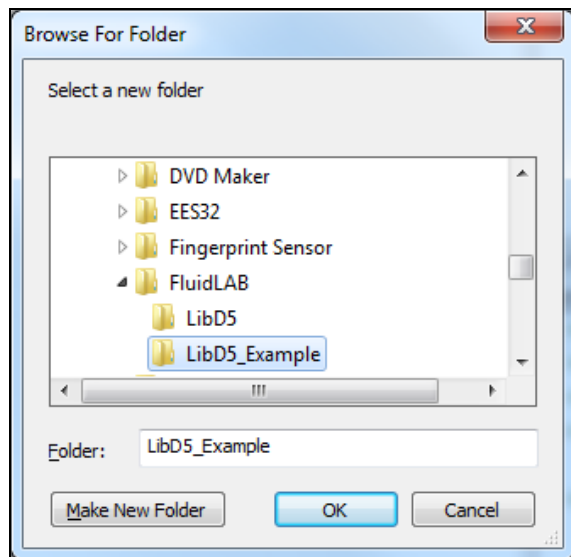


Figure 2.8: Choosing the "LibD5_Example" folder

- Confirm your selection by clicking the "OK" button.
- First of all you need to create an M-File in MATLAB®. Within MATLAB® click "Desktop", then select "Editor". Now click on the "New Script" button in the Editor Window.
- If the "Editor" window appears as a separate window, you can embed it into MATLAB® by clicking the insertion arrow (see next figure) in order to obtain a better view.

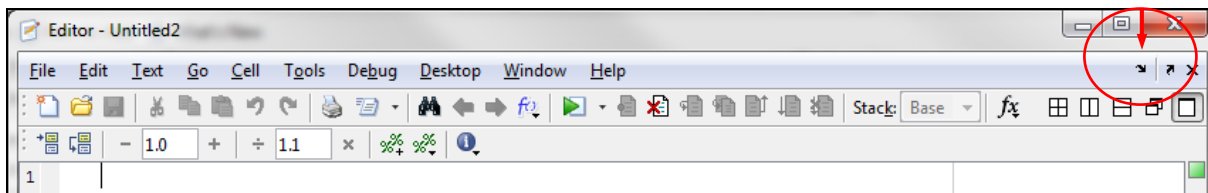


Figure 2.9: Embedding the "Editor" window

- In the following figure you will see the "Editor – Untitled" window.

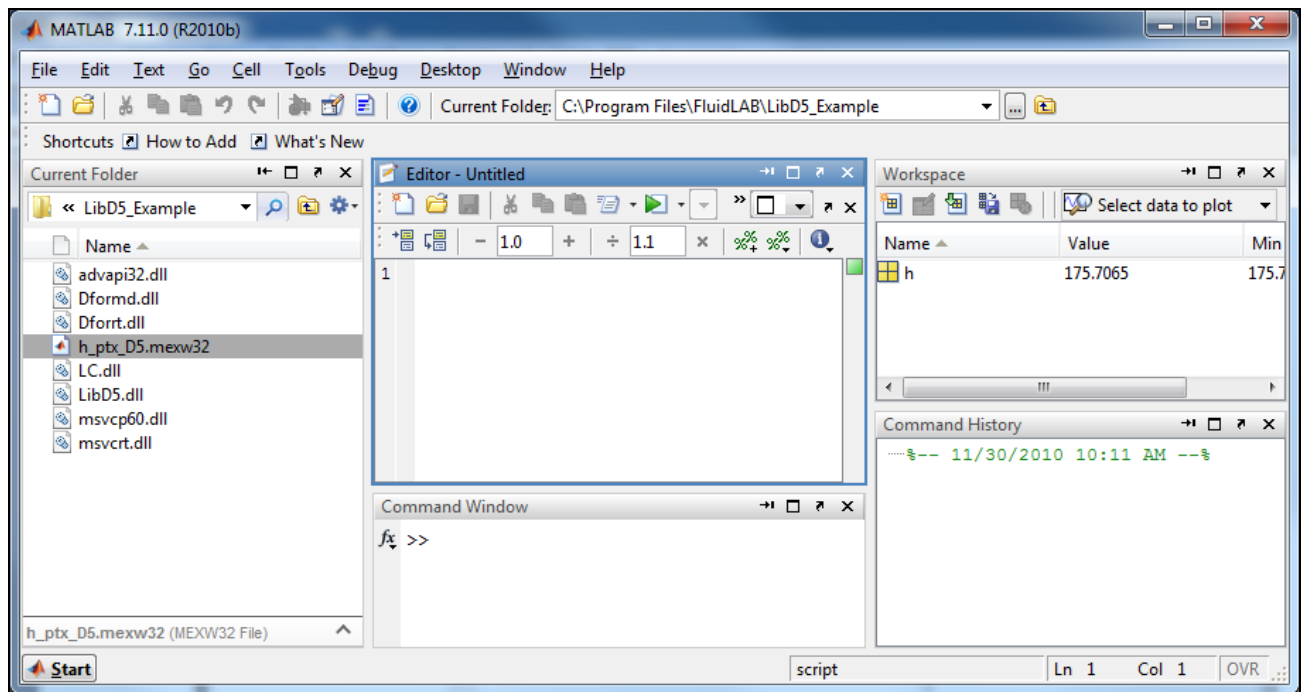


Figure 2.10: Embedded "Editor" window

- Now type the following lines in the "Editor - Untitled" window:

Text to be written:	Explanation:
<code>% h_ptx_D5.m</code>	file name as comment
<code>%%</code>	paragraph separation
<code>p=10; % pressure in bar</code>	declaration of the variables pressure, temperature, art and composition of mixture
<code>t=300; % temperature in °C</code>	
<code>x=-1; % vapor fraction in kg/kg</code>	paragraph separation
<code>%%</code>	
<code>h=h_ptx_D5(p, t, x)</code>	function call
<code>%%</code>	paragraph separation

- Remarks:

- The program interprets the first line, starting with "%," to be a data description in "Current Directory."
- Paragraph separations which are mandatory are marked with "%%". This also serves to separate the declaration of variables and calculation instructions.
- The words which are printed in green, start with "%" and come after the variables are comments. They are not in fact absolutely necessary, but they are very helpful for your overview and to make the process more easily understood.
- Omit the semicolons after the numerical values if you wish to see the result for h and the input parameters.

The values of the function parameters in their corresponding units stand for:

- First operand: Value for $p = 10$
(Range of validity: $p = 0.00001 \text{ bar}$ to 300 bar)
- Second operand: Value for $t = 300 \text{ °C}$
(Range of validity: $t = 26.85 \text{ °C}$ to 399.85 °C)
- Third operand: Value for $x = -1 \text{ kg/kg}$

Since the wet steam region is calculated automatically by the subprograms, the following fixed details on the vapor fraction x are to be considered:

If the state point to be calculated is located in the single-phase region (liquid or superheated steam), e. g., pressure p and temperature t are given, the value -1 must be entered into the x cell as a pro-forma value.

In case, the state point to be calculated is located in the wet steam region, values between 0 and 1 have to be entered for x (the value 0 for boiling liquid, the value 1 for saturated steam).

Here, it is adequate to enter either the value given for t and $p = -1$, or the given value for p and $t = -1$, plus the value for x between 0 and 1.

However, if p and t and x are given when calculating wet steam, the program initially checks whether p and t meet the saturation-pressure curve. If this is not the case the enthalpy calculated later will result in -1000.

(D5 Saturation-pressure curve: $t = 26.85 \text{ °C}$ to $t_c = 346.0846 \text{ °C}$

$$p_s(26.85 \text{ °C}) = 0.001477917 \text{ bar to } p_c = 11.6146 \text{ bar})$$

- Save the "M-File" by clicking the "File" button and then click "Save As...".
- The menu "Save file as:" appears; In this menu, the folder name "LibD5_Example" must be displayed in the "Save in:" field.
- Next to "File name" you have to type "Example_h_ptx_D5.m" and afterwards click the "Save" button.

Note.

The name of the example file has to be different in comparison to the name of the used function. For example, the file could not be named "h_ptx_D5.m" in this case. Otherwise an error message will appear during the calculation.

- You will now see the following window:

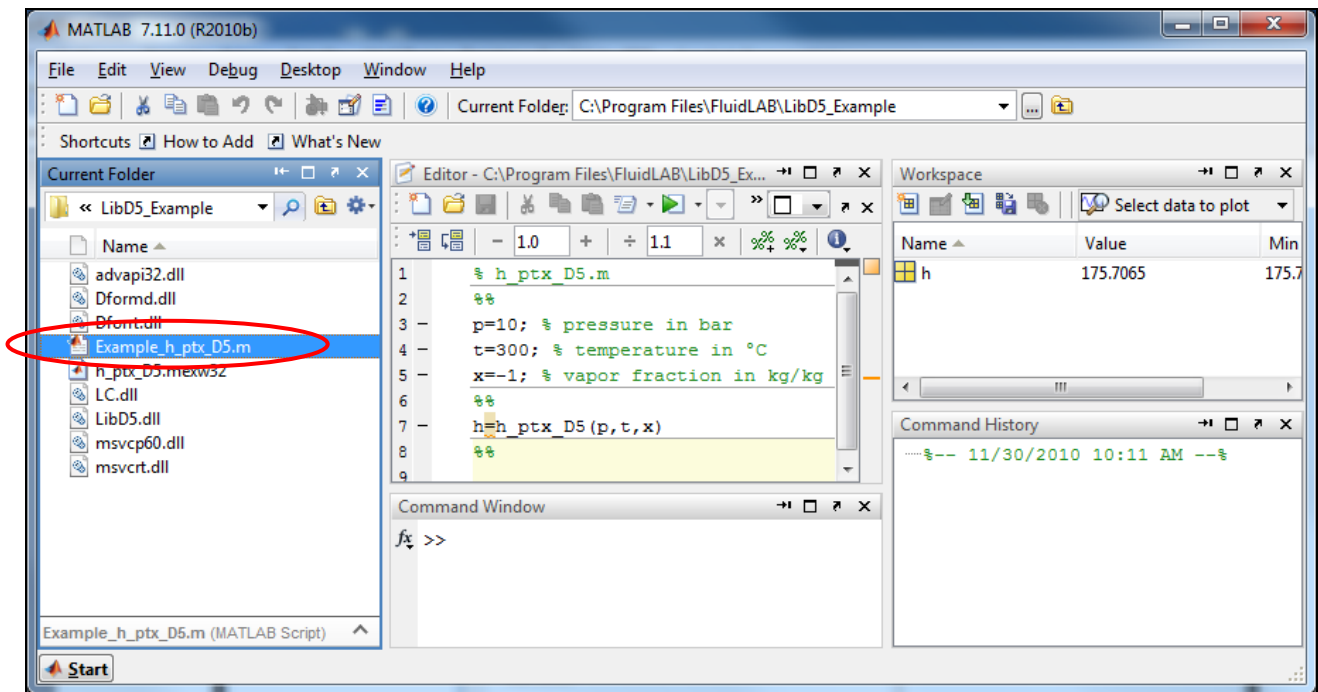


Figure 2.11: "Example_h_ptx_D5.m" M-file

- Within the "Current Folder" window, the file "Example_h_ptx_D5.m" appears.
- Right-click on this file and select "Run" in the menu which appears (see next image).

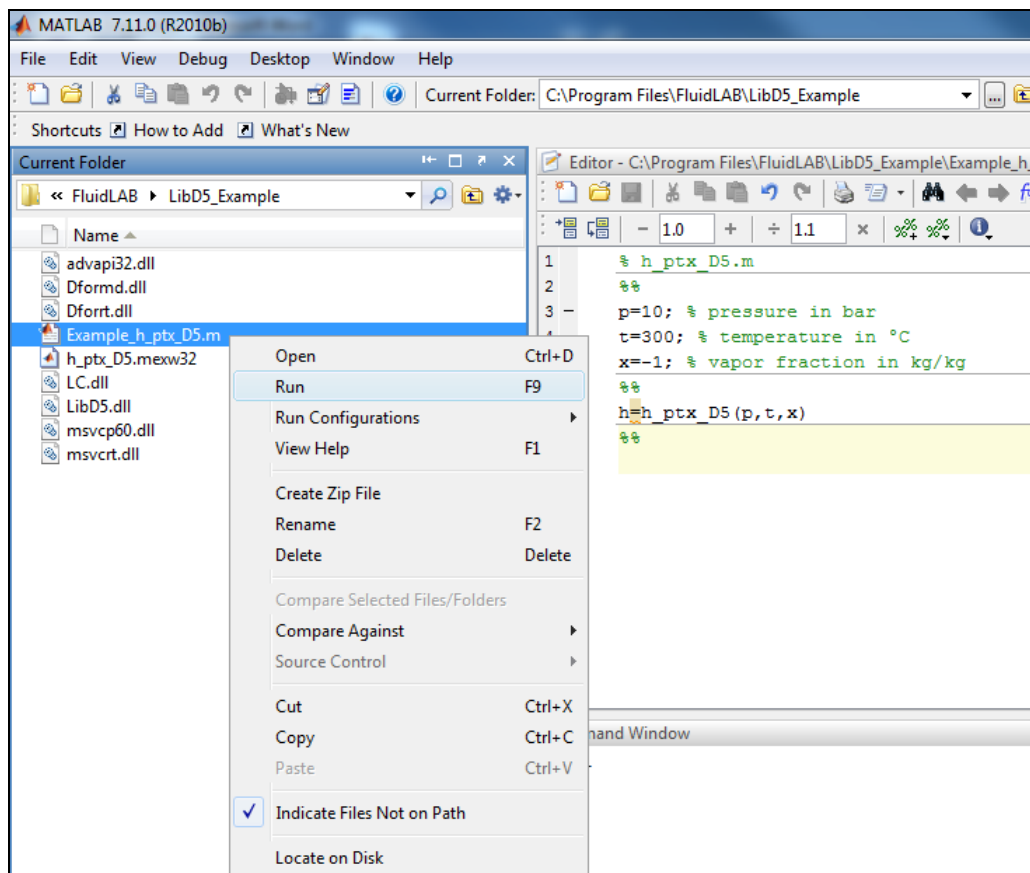


Figure 2.12: Running the "Example_h_ptx_D5.m" M-file

- You will see the following window:

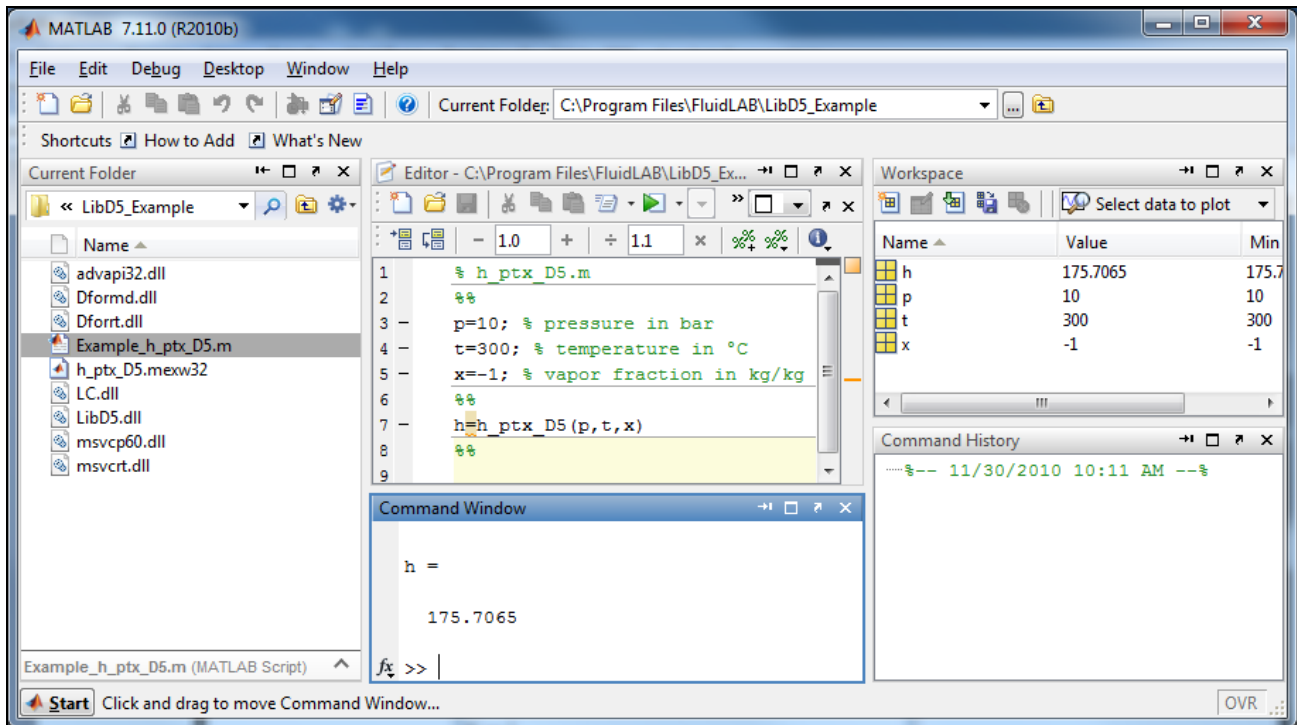


Figure 2.13: MATLAB® with calculated result

The result for h appears in the "Command Window".

⇒ The result in our sample calculation here is: " $h = 175.7065$ ". The corresponding unit is kJ/kg (see table of the property functions in Chapter 1).

To be able to calculate other values, you have to copy the associated mexw32 files as well because MATLAB® can only access functions that are located in the "Current Directory" window. The example calculated can be found in the directory C:\Program Files\FluidLAB\LibD5_Example," and you may use it as a basis for further calculations using FluidLAB.

2.3 Example: Calculation of $h = f(p,t,x)$ in the Command Window

- Start MATLAB® (if you have not started it already).
- Click the button marked in the following image in order to open the folder "LibD5_Example" in the window "Current Folder."

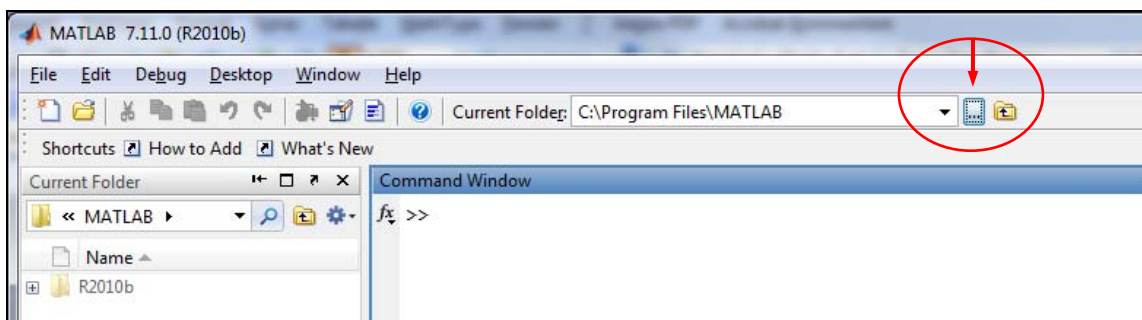


Figure 2.14: Selection of the working directory

- Find and select the directory "C:\Program Files\FluidLAB\LibD5_Example" in the pop-up menu (see the following image).

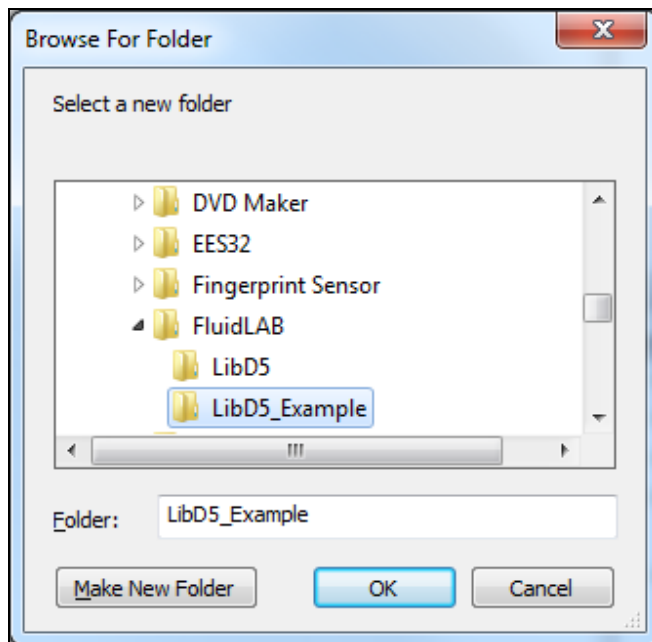


Figure 2.15: Choosing the "LibD5_Example" folder

- Confirm your selection by clicking the "OK" button.
- You will see the following window:

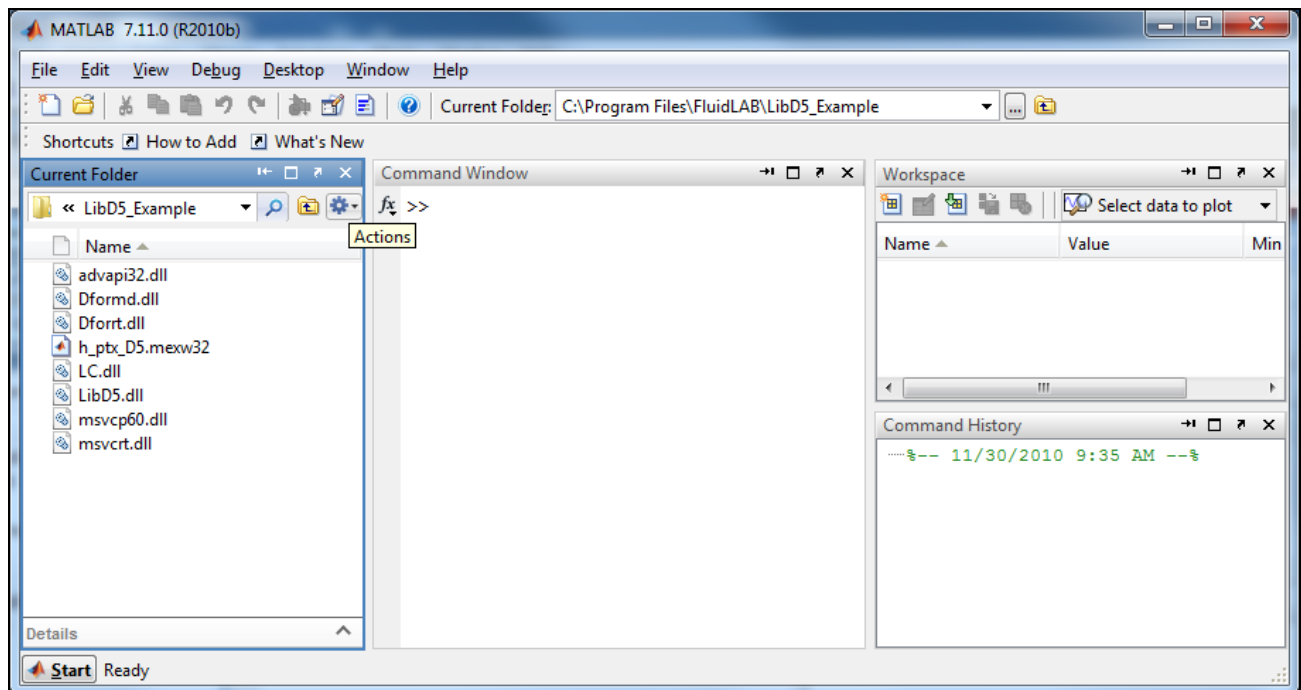


Figure 2.16: MATLAB® with necessary files

Corresponding to the table of the property functions in Chapter 1 you have to call up the function "h_ptx_D5" as follows for calculating $h = f(p, t, x)$.

Write "**h=h_ptx_D5(10,300,-1)**" within the "Command Window"

The values of the function parameters in their corresponding units stand for:

- **First operand: Value for $p = 10$ bar**
(Range of validity: $p = 0.00001$ bar to 300 bar)
- **Second operand: Value for $t = 300$ °C**
(Range of validity: $t = 26.85$ °C to 399.85 °C)
- **Third operand: Value for $x = -1$**

Since the wet steam region is calculated automatically by the subprograms, the following fixed details on the vapor fraction x are to be considered:

If the state point to be calculated is located in the single-phase region (liquid or superheated steam), e. g., pressure p and temperature t are given, the value -1 must be entered into the x cell as a pro-forma value.

In case, the state point to be calculated is located in the wet steam region, values between 0 and 1 have to be entered for x (the value 0 for boiling liquid, the value 1 for saturated steam).

Here, it is adequate to enter either the value given for t and $p = -1$, or the given value for p and $t = -1$, plus the value for x between 0 and 1.

However, if p and t and x are given when calculating wet steam, the program initially checks whether p and t meet the saturation-pressure curve. If this is not the case the enthalpy calculated later will result in -1000.

(D5 Saturation-pressure curve: $t = 26.85$ °C to $t_c = 346.0846$ °C

$$p_s(26.85 \text{ °C}) = 0.001477917 \text{ bar to } p_c = 11.6146 \text{ bar})$$

- Confirm your entry by pressing the "ENTER" button.

- You will see the following window:

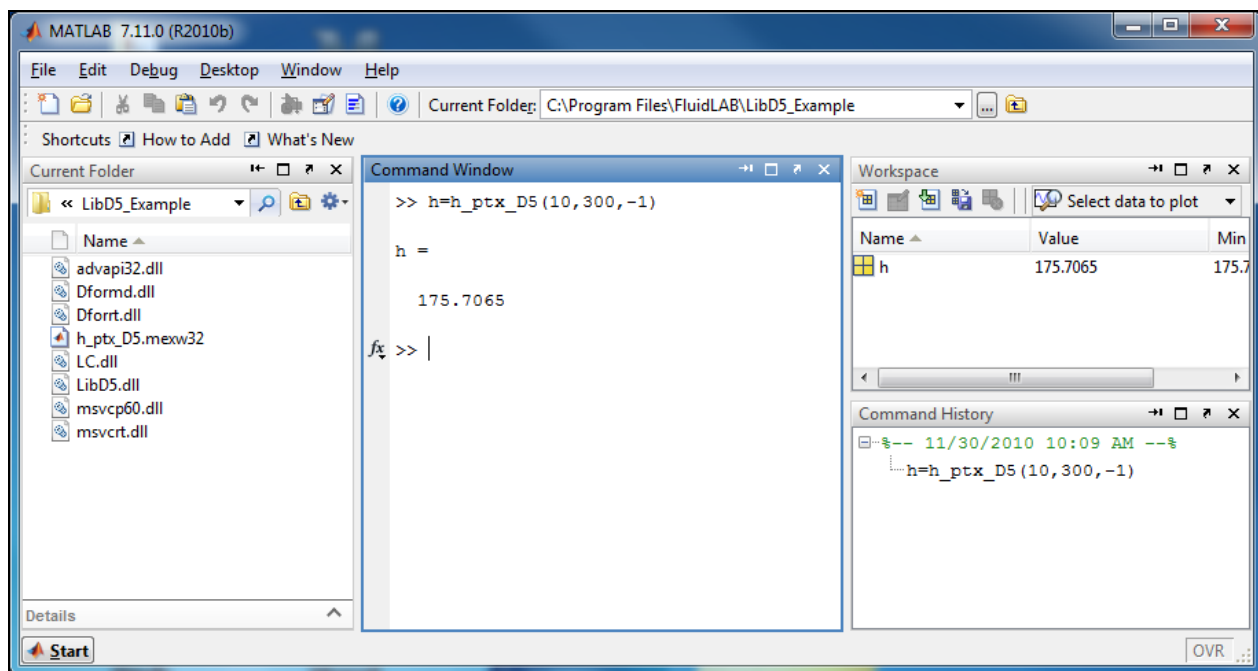


Figure 2.17: MATLAB® with calculated result

⇒ In the "Command Window" you will see the result "**h = 175.7065**". The corresponding unit is kJ/kg (see table of the property functions in Chapter 1).

To be able to calculate other values, you will have to copy the respective mexw32 files into the working directory as well, because MATLAB® can only access functions that are located in the "Current Directory" window.

2.2.4 Removing FluidLAB including LibD5

To remove the property library LibD5 from your hard disk drive in Windows®, click "Start" in the Windows® task bar, select "Settings" and click "Control Panel".

Now double-click on "Add or Remove Programs". In the list box of the "Add or Remove Programs" window that appears select "FluidLAB LibD5" by clicking on it and click the "Change/Remove" button.

In the following dialog box click "Automatic" and then click the "Next >" button.

Confirm the following menu "Perform Uninstall" by clicking the "Finish" button.

Finally, close the "Add or Remove Programs" and "Control Panel" windows. Now, FluidLAB has been removed.

If there is no library other than LibD5 installed, the directory "FluidLAB" will be removed as well.

3. Program Documentation

Specific Isobaric Heat Capacity $c_p = f(p, t, x)$

Function Name: **cp_ptx_D5**

Subroutine with function value:
for call from Fortran **REAL*8 FUNCTION CPPTXD5(P,T,X)**
REAL*8 P,T,X

Subroutine with parameter:
for call from DLL **INTEGER*4 FUNCTION C_CPPTXD5(CP,P,T,X)**
REAL*8 CP,P,T,X

Input Values:

P - Pressure p in bar
T - Temperature t in °C
X - Vapor fraction x (kg of saturated steam)/(kg wet steam)

Result

CPPTXD5, CP or cp_ptx_D5 - specific isobaric heat capacity c_p in kJ/(kg K)

Range of validity

Temperature range: from $t = 26.85^\circ\text{C}$ to 399.85°C
 Pressure range: from $p = 0.00001$ bar to 300 bar

Details on the vapor fraction x and on the calculation of wet steam

The wet steam region is calculated automatically by the subprograms. For this purpose the following fixed details on the vapor fraction x are to be considered:

If the state point to be calculated is located in the single-phase region (liquid or superheated steam) $x = -1$ must be entered as a pro-forma value.

If the state point to be calculated is located in the two phase region (wet steam), either the value 0 or 1 has to be entered for x ($x = 0$ for boiling liquid, $x = 1$ for saturated steam). The calculation for x values between 0 and 1 is not possible.

If the state point to be calculated is located in the two phase region, it is adequate to enter either the given value for t and $p = -1000$, or the given value for p and $t = -1000$, plus the value for x between 0 and 1.

When calculating wet steam and p and t and x are entered as given values, the program will consider p and t to be appropriate to represent the saturation-pressure curve. If it is not the case the calculation for the quantity of the chosen function to be calculated results in -1000.

Wet steam region: Temperature ranges from $t = 26.85^\circ\text{C}$ to $t_c = 346.0846^\circ\text{C}$
 Pressure ranges from $p_s(26.85^\circ\text{C}) = 0.001477917$ bar to $p_c = 11.6146$ bar

Results for wrong input values

Result **CPPTXD5 = -1000, CP = -1000 or cp_ptx_D5 = -1000** for input values:

Single phase region: $p > 300$ bar or $p < 0.00001$ bar or
 ($x = -1$) $t > 399.85^\circ\text{C}$ or $t < 26.85^\circ\text{C}$

Boiling or dew curve: at $p = -1000$ and $t > t_c = 346.0846^\circ\text{C}$ or $t < 26.85^\circ\text{C}$
 at $t = -1000$ and $p > p_c = 11.6146$ bar
 or $p < p_s(26.85^\circ\text{C}) = 0.001477917$ bar or
 at $p > p_c = 11.6146$ bar or $p < p_s(26.85^\circ\text{C}) = 0.001477917$ bar and
 $t > t_c = 346.0846^\circ\text{C}$ or $t < 26.85^\circ\text{C}$

References: [1]

Specific Isochoric Heat Capacity $c_v = f(p, t, x)$

Function Name: **cv_ptx_D5**

Subroutine with function value: **REAL*8 FUNCTION CVPTXD5(P,T,X)**
for call from Fortran **REAL*8 P,T,X**

Subroutine with parameter: **INTEGER*4 FUNCTION C_CVPTXD5(CV,P,T,X)**
for call from DLL **REAL*8 CV,P,T,X**

Input Values:

P - Pressure p in bar
T - Temperature t in °C
X - Vapor fraction x (kg of saturated steam)/(kg wet steam)

Result

CVPTXD5, CV or **cv_ptx_D5** - specific isochoric heat capacity c_v in kJ/(kg K)

Range of validity

Temperature range: from $t = 26.85^\circ\text{C}$ to 399.85°C
 Pressure range: from $p = 0.00001$ bar to 300 bar

Details on the vapor fraction x and on the calculation of wet steam

The wet steam region is calculated automatically by the subprograms. For this purpose the following fixed details on the vapor fraction x are to be considered:

If the state point to be calculated is located in the single-phase region (liquid or superheated steam) $x = -1$ must be entered as a pro-forma value.

If the state point to be calculated is located in the two phase region (wet steam), either the value 0 or 1 has to be entered for x ($x = 0$ for boiling liquid, $x = 1$ for saturated steam). The calculation for x values between 0 and 1 is not possible.

If the state point to be calculated is located in the two phase region, it is adequate to enter either the given value for t and $p = -1000$, or the given value for p and $t = -1000$, plus the value for x between 0 and 1.

When calculating wet steam and p and t and x are entered as given values, the program will consider p and t to be appropriate to represent the saturation-pressure curve. If it is not the case the calculation for the quantity of the chosen function to be calculated results in -1000.

Wet steam region: Temperature ranges from $t = 26.85^\circ\text{C}$ to $t_c = 346.0846^\circ\text{C}$
 Pressure ranges from $p_s(26.85^\circ\text{C}) = 0.001477917$ bar to $p_c = 11.6146$ bar

Results for wrong input values

Result **CVPTXD5 = -1000, CV = -1000** or **cv_ptx_D5 = -1000** for input values:

Single phase region: $p > 300$ bar or $p < 0.00001$ bar or
 ($x = -1$) $t > 399.85^\circ\text{C}$ or $t < 26.85^\circ\text{C}$

Boiling or dew curve: at $p = -1000$ and $t > t_c = 346.0846^\circ\text{C}$ or $t < 26.85^\circ\text{C}$
 at $t = -1000$ and $p > p_c = 11.6146$ bar
 or $p < p_s(26.85^\circ\text{C}) = 0.001477917$ bar or
 at $p > p_c = 11.6146$ bar or $p < p_s(26.85^\circ\text{C}) = 0.001477917$ bar and
 $t > t_c = 346.0846^\circ\text{C}$ or $t < 26.85^\circ\text{C}$

References: [1]

Derivative of Pressure with Respect to Temperature (at Constant Specific Volume) $\left(\frac{\partial p}{\partial T}\right)_v = f(p, t, x)$

Function Name: **dpdtv_ptx_D5**
 Subroutine with function value: **REAL*8 FUNCTION DPDTVPTXD5(P,T,X)**
 for call from Fortran **REAL*8 P,T,X**
 Subroutine with parameter: **INTEGER*4 FUNCTION C_DPDTPVPTXD5(DPDTPV,P,T,X)**
 for call from DLL **REAL*8 DPDTV,P,T,X**

Input Values:

P - Pressure p in bar
T - Temperature t in °C
X - Vapor fraction x (kg of saturated steam)/(kg wet steam)

Result

DPDTVPTXD5, DPDTV or dpdtv_ptx_D5 - Derivative of pressure with respect to temperature (at constant specific volume) dpdtv in kPa/K

Range of validity

Temperature range: from $t = 26.85^\circ\text{C}$ to 399.85°C
 Pressure range: from $p = 0.00001$ bar to 300 bar

Details on the vapor fraction x and on the calculation of wet steam

The wet steam region is calculated automatically by the subprograms. For this purpose the following fixed details on the vapor fraction x are to be considered:

If the state point to be calculated is located in the single-phase region (liquid or superheated steam) $x = -1$ must be entered as a pro-forma value.

If the state point to be calculated is located on the boiling curve, $x = 0$ must be entered. When calculating saturated steam (dew curve) $x = 1$ is entered as given value. The calculation for x values between 0 and 1 is not possible.

If the state point to be calculated is located in the two phase region, it is adequate to enter either the given value for t and $p = -1000$, or the given value for p and $t = -1000$, plus the value for x between 0 and 1. When calculating wet steam and p and t and x are entered as given values, the program will consider p and t to be appropriate to represent the saturation-pressure curve.

Boiling and dew curve: Temperature ranges from $t = 26.85^\circ\text{C}$ to $t_c = 346.0846^\circ\text{C}$
 Pressure ranges from $p_s(26.85^\circ\text{C}) = 0.001477917$ bar to $p_c = 11.6146$ bar

Results for wrong input values

Result **DPDTVPTXD5 = -1000, DPDTV = -1000 or dpdtv_ptx_D5 = -1000** for input values:

Single phase region: $p > 300$ bar or $p < 0.00001$ bar or
 ($x = -1$) $t > 399.85^\circ\text{C}$ or $t < 26.85^\circ\text{C}$

Boiling or dew curve: at $p = -1000$ and $t > t_c = 346.0846^\circ\text{C}$ or $t < 26.85^\circ\text{C}$
 at $t = -1000$ and $p > p_c = 11.6146$ bar
 or $p < p_s(26.85^\circ\text{C}) = 0.001477917$ bar or
 at $p > p_c = 11.6146$ bar or $p < p_s(26.85^\circ\text{C}) = 0.001477917$ bar and
 $t > t_c = 346.0846^\circ\text{C}$ or $t < 26.85^\circ\text{C}$

References: [1]

Derivative of Pressure with Respect to Specific Volume (at Constant Temperature) $\left(\frac{\partial p}{\partial v}\right)_T = f(p, t, x)$

Function Name: **dpdvt_ptx_D5**
 Subroutine with function value: **REAL*8 FUNCTION DPDVTPTXD5(P,T,X)**
 for call from Fortran **REAL*8 P,T,X**
 Subroutine with parameter: **INTEGER*4 FUNCTION C_DPDVTPTXD5(DPDVT,P,T,X)**
 for call from DLL **REAL*8 DPDVT,P,T,X**

Input Values:

P - Pressure p in bar
T - Temperature t in °C
X - Vapor fraction x (kg of saturated steam)/(kg wet steam)

Result

DPDVTPTXD4, DPDVT or dpdvt_ptx_D4 - Derivative of pressure with respect to temperature (at constant specific volume) dpdvt in kPa/(m³/kg)

Range of validity

Temperature range: from $t = 26.85^\circ\text{C}$ to 399.85°C
 Pressure range: from $p = 0.00001$ bar to 300 bar

Details on the vapor fraction x and on the calculation of wet steam

The wet steam region is calculated automatically by the subprograms. For this purpose the following fixed details on the vapor fraction x are to be considered:

If the state point to be calculated is located in the single-phase region (liquid or superheated steam) $x = -1$ must be entered as a pro-forma value.

If the state point to be calculated is located on the boiling curve, $x = 0$ must be entered. When calculating saturated steam (dew curve) $x = 1$ is entered as given value. The calculation for x values between 0 and 1 is not possible.

If the state point to be calculated is located in the two phase region, it is adequate to enter either the given value for t and $p = -1000$, or the given value for p and $t = -1000$, plus the value for x between 0 and 1. When calculating wet steam and p and t are entered as given values, the program will consider p and t to be appropriate to represent the saturation-pressure curve.

Wet steam region: Temperature ranges from $t = 26.85^\circ\text{C}$ to $t_c = 346.0846^\circ\text{C}$
 Pressure ranges from $p_s(26.85^\circ\text{C}) = 0.001477917$ bar to $p_c = 11.6146$ bar

Results for wrong input values

Result **DPDVTPTXD5 = -1000, DPDVT = -1000 or dpdvt_ptx_D5 = -1000** for input values:

Single phase region: $p > 300$ bar or $p < 0.00001$ bar or
 ($x = -1$) $t > 399.85^\circ\text{C}$ or $t < 26.85^\circ\text{C}$

Boiling or dew curve: at $p = -1000$ and $t > t_c = 346.0846^\circ\text{C}$ or $t < 26.85^\circ\text{C}$
 at $t = -1000$ and $p > p_c = 11.6146$ bar
 or $p < p_s(26.85^\circ\text{C}) = 0.001477917$ bar or
 at $p > p_c = 11.6146$ bar or $p < p_s(26.85^\circ\text{C}) = 0.001477917$ bar and
 $t > t_c = 346.0846^\circ\text{C}$ or $t < 26.85^\circ\text{C}$

References: [1]

Specific Enthalpy $h = f(p, t, x)$

Function Name: **h_ptx_D5**

Subroutine with function value:
for call from Fortran **REAL*8 FUNCTION HPTXD5(P,T,X)**
REAL*8 P,T,X

Subroutine with parameter:
for call from DLL **INTEGER*4 FUNCTION C_HPTXD5(H,P,T,X)**
REAL*8 H,P,T,X

Input Values:

P - Pressure p in bar
T - Temperature t in °C
X - Vapor fraction x (kg of saturated steam)/(kg wet steam)

Result

HPTXD5, H or **h_ptx_D5** - specific enthalpy h in kJ/kg

Range of validity

Temperature range: from $t = 26.85^\circ\text{C}$ to 399.85°C
 Pressure range: from $p = 0.00001$ bar to 300 bar

Details on the vapor fraction x and on the calculation of wet steam

The wet steam region is calculated automatically by the subprograms. For this purpose the following fixed details on the vapor fraction x are to be considered:

If the state point to be calculated is located in the single-phase region (liquid or superheated steam) $x = -1$ must be entered as a pro-forma value.

If the state point to be calculated is located in the two phase region (wet steam), either the value 0 or 1 has to be entered for x ($x = 0$ for boiling liquid, $x = 1$ for saturated steam). The calculation for x values between 0 and 1 is not possible.

If the state point to be calculated is located in the two phase region, it is adequate to enter either the given value for t and $p = -1000$, or the given value for p and $t = -1000$, plus the value for x between 0 and 1.

When calculating wet steam and p and t and x are entered as given values, the program will consider p and t to be appropriate to represent the saturation-pressure curve. If it is not the case the calculation for the quantity of the chosen function to be calculated results in -1000.

Wet steam region: Temperature ranges from $t = 26.85^\circ\text{C}$ to $t_c = 346.0846^\circ\text{C}$
 Pressure ranges from $p_s(26.85^\circ\text{C}) = 0.001477917$ bar to $p_c = 11.6146$ bar

Results for wrong input values

Result **HPTXD5 = -1000, H = -1000** or **h_ptx_D5 = -1000** for input values:

Single phase region: $p > 300$ bar or $p < 0.00001$ bar or
 ($x = -1$) $t > 399.85^\circ\text{C}$ or $t < 26.85^\circ\text{C}$

Boiling or dew curve: at $p = -1000$ and $t > t_c = 346.0846^\circ\text{C}$ or $t < 26.85^\circ\text{C}$
 at $t = -1000$ and $p > p_c = 11.6146$ bar
 or $p < p_s(26.85^\circ\text{C}) = 0.001477917$ bar or
 at $p > p_c = 11.6146$ bar or $p < p_s(26.85^\circ\text{C}) = 0.001477917$ bar and
 $t > t_c = 346.0846^\circ\text{C}$ or $t < 26.85^\circ\text{C}$

References: [1]

Isentropic Exponent $\kappa = f(p, t, x)$

Function Name: **kappa_ptx_D5**
 Subroutine with function value: **REAL*8 FUNCTION KAPPAPTXD5(P,T,X)**
 for call from Fortran **REAL*8 P,T,X**
 Subroutine with parameter: **INTEGER*4 FUNCTION C_KAPPAPTXD5(KAPPA,P,T,X)**
 for call from DLL **REAL*8 KAPPA,P,T,X**

Input Values:

P - Pressure p in bar
T - Temperature t in °C
X - Vapor fraction x (kg of saturated steam)/(kg wet steam)

Result

KAPPAPTXD5, KAPPA or kappa_ptx_D5 - Isentropic exponent $\kappa = \frac{w^2}{p \cdot v}$

Range of validity

Temperature range: from $t = 26.85^\circ\text{C}$ to 399.85°C
 Pressure range: from $p = 0.00001$ bar to 300 bar

Details on the vapor fraction x and on the calculation of wet steam

The wet steam region is calculated automatically by the subprograms. For this purpose the following fixed details on the vapor fraction x are to be considered:

If the state point to be calculated is located in the single-phase region (liquid or superheated steam) $x = -1$ must be entered as a pro-forma value.

If the state point to be calculated is located on the boiling curve, $x = 0$ must be entered. When calculating saturated steam (dew curve) $x = 1$ is entered as given value. The calculation for x values between 0 and 1 is not possible.

If the state point to be calculated is located in the two phase region, it is adequate to enter either the given value for t and $p = -1000$, or the given value for p and $t = -1000$, plus the value for x between 0 and 1. When calculating wet steam and p and t and x are entered as given values, the program will consider p and t to be appropriate to represent the saturation-pressure curve.

Boiling and dew curve: Temperature ranges from $t = 26.85^\circ\text{C}$ to $t_c = 346.0846^\circ\text{C}$
 Pressure ranges from $p_s(26.85^\circ\text{C}) = 0.001477917$ bar to $p_c = 11.6146$ bar

Results for wrong input values

Result **KAPPAPTXD5, KAPPA = -1000** or **kappa_ptx_D5 = -1000** for input values:

Single phase region: $p > 300$ bar or $p < 0.00001$ bar or
 ($x = -1$) $t > 399.85^\circ\text{C}$ or $t < 26.85^\circ\text{C}$

Boiling or dew curve: at $p = -1000$ and $t > t_c = 346.0846^\circ\text{C}$ or $t < 26.85^\circ\text{C}$
 at $t = -1000$ and $p > p_c = 11.6146$ bar
 or $p < p_s(26.85^\circ\text{C}) = 0.001477917$ bar or
 at $p > p_c = 11.6146$ bar or $p < p_s(26.85^\circ\text{C}) = 0.001477917$ bar and
 $t > t_c = 346.0846^\circ\text{C}$ or $t < 26.85^\circ\text{C}$

References: [1]

Vapor Pressure $p_s = f(t)$

Function Name:	ps_t_D5
Subroutine with function value: for call from Fortran	REAL*8 FUNCTION PSTD5(T) REAL*8 T
Subroutine with parameter: for call from DLL	INTEGER*4 FUNCTION C_PSTD5(PS,T) REAL*8 PS,T

Input Values:

T - Temperature t in °C

Result

PSTD5, PS or ps_t_D5 - Vapor pressure p_s in bar

Range of validity

Temperature range: from $t = 26.85$ °C to $t_c = 346.0846$ °C

Results for wrong input values

Result **PSTD5 = -1000, PS = -1000 or ps_t_D5 = -1000** for input values:

$t = 26.85$ °C to $t_c = 346.0846$ °C

References: [1]

Density $\rho = f(p, t, x)$

Function Name: **rho_ptx_D5**

Subroutine with function value:
for call from Fortran **REAL*8 FUNCTION RHOPTXD5(P,T,X)**
REAL*8 P,T,X

Subroutine with parameter:
for call from DLL **INTEGER*4 FUNCTION C_RHOPTXD5(RHO,P,T,X)**
REAL*8 RHO,P,T,X

Input Values:

P - Pressure p in bar
T - Temperature t in °C
X - Vapor fraction x (kg of saturated steam)/(kg wet steam)

Result

RHO_PTX_D5, RHO or **rho_ptx_D5** - Density ρ in kg/m³

Range of validity

Temperature range: from $t = 26.85^\circ\text{C}$ to 399.85°C
 Pressure range: from $p = 0.00001$ bar to 300 bar

Details on the vapor fraction x and on the calculation of wet steam

The wet steam region is calculated automatically by the subprograms. For this purpose the following fixed details on the vapor fraction x are to be considered:

If the state point to be calculated is located in the single-phase region (liquid or superheated steam) $x = -1$ must be entered as a pro-forma value.

If the state point to be calculated is located in the two phase region (wet steam), either the value 0 or 1 has to be entered for x ($x = 0$ for boiling liquid, $x = 1$ for saturated steam). The calculation for x values between 0 and 1 is not possible.

If the state point to be calculated is located in the two phase region, it is adequate to enter either the given value for t and $p = -1000$, or the given value for p and $t = -1000$, plus the value for x between 0 and 1.

When calculating wet steam and p and t and x are entered as given values, the program will consider p and t to be appropriate to represent the saturation-pressure curve. If it is not the case the calculation for the quantity of the chosen function to be calculated results in -1000.

Wet steam region: Temperature ranges from $t = 26.85^\circ\text{C}$ to $t_c = 346.0846^\circ\text{C}$
 Pressure ranges from $p_s(26.85^\circ\text{C}) = 0.001477917$ bar to $p_c = 11.6146$ bar

Results for wrong input values

Result **RHOPTXD5 = -1000, RHO = -1000** or **rho_ptx_D5 = -1000** for input values:

Single phase region: $p > 300$ bar or $p < 0.00001$ bar or
 ($x = -1$) $t > 399.85^\circ\text{C}$ or $t < 26.85^\circ\text{C}$

Wet steam region: at $p = -1000$ and $t > t_c = 346.0846^\circ\text{C}$ or $t < 26.85^\circ\text{C}$
 at $t = -1000$ and $p > p_c = 11.6146$ bar
 or $p < p_s(26.85^\circ\text{C}) = 0.001477917$ bar or
 at $p > p_c = 11.6146$ bar or $p < p_s(26.85^\circ\text{C}) = 0.001477917$ bar and
 $t > t_c = 346.0846^\circ\text{C}$ or $t < 26.85^\circ\text{C}$

References: [1]

Specific Entropy $s = f(p, t, x)$

Function Name: **s_ptx_D5**

Subroutine with function value:
for call from Fortran **REAL*8 FUNCTION SPTXD5(P,T,X)**
REAL*8 P,T,X

Subroutine with parameter:
for call from DLL **INTEGER*4 FUNCTION C_SPTXD5(S,P,T,X)**
REAL*8 S,P,T,X

Input Values:

P - Pressure p in bar
T - Temperature t in °C
X - Vapor fraction x (kg of saturated steam)/(kg wet steam)

Result

SPTXD5, S or s_ptx_D5 - Specific entropy s in kJ/kg K

Range of validity

Temperature range: from $t = 26.85^\circ\text{C}$ to 399.85°C
 Pressure range: from $p = 0.00001$ bar to 300 bar

Details on the vapor fraction x and on the calculation of wet steam

The wet steam region is calculated automatically by the subprograms. For this purpose the following fixed details on the vapor fraction x are to be considered:

If the state point to be calculated is located in the single-phase region (liquid or superheated steam) $x = -1$ must be entered as a pro-forma value.

If the state point to be calculated is located in the two phase region (wet steam), either the value 0 or 1 has to be entered for x ($x = 0$ for boiling liquid, $x = 1$ for saturated steam). The calculation for x values between 0 and 1 is not possible.

If the state point to be calculated is located in the two phase region, it is adequate to enter either the given value for t and $p = -1000$, or the given value for p and $t = -1000$, plus the value for x between 0 and 1.

When calculating wet steam and p and t and x are entered as given values, the program will consider p and t to be appropriate to represent the saturation-pressure curve. If it is not the case the calculation for the quantity of the chosen function to be calculated results in -1000.

Wet steam region: Temperature ranges from $t = 26.85^\circ\text{C}$ to $t_c = 346.0846^\circ\text{C}$
 Pressure ranges from $p_s(26.85^\circ\text{C}) = 0.001477917$ bar to $p_c = 11.6146$ bar

Results for wrong input values

Result **SPTXD5 = -1000, S = -1000 or s_ptx_D5 = -1000** for input values:

Single phase region: $p > 300$ bar or $p < 0.00001$ bar or
 ($x = -1$) $t > 399.85^\circ\text{C}$ or $t < 26.85^\circ\text{C}$

Boiling or dew curve: at $p = -1000$ and $t > t_c = 346.0846^\circ\text{C}$ or $t < 26.85^\circ\text{C}$
 at $t = -1000$ and $p > p_c = 11.6146$ bar
 or $p < p_s(26.85^\circ\text{C}) = 0.001477917$ bar or
 at $p > p_c = 11.6146$ bar or $p < p_s(26.85^\circ\text{C}) = 0.001477917$ bar and
 $t > t_c = 346.0846^\circ\text{C}$ or $t < 26.85^\circ\text{C}$

References: [1]

Backward Function: Temperature $t = f(p, h)$

Function Name: **t_ph_D5**

Subroutine with function value:
for call from Fortran **REAL*8 FUNCTION TPHD5(P,H)**
REAL*8 P,H

Subroutine with parameter:
for call from DLL **INTEGER*4 FUNCTION C_TPHD5(T,P,H)**
REAL*8 T,P,H

Input Values:

P - Pressure p in bar
H - Specific enthalpy h in kJ/kg

Result

TPHD5, T or **t_ph_D5** - Temperature t in °C

Range of validity

Temperature range: from $t = 26.85^\circ\text{C}$ to 399.85°C
 Pressure range: from $p = 0.00001$ bar to 300 bar

Details on the calculation of wet steam

The wet steam region is calculated automatically. That means the given values of p and h are taken as a basis and the subprogram will determine whether the state point to be calculated is located within the single-phase region (liquid or steam) or the wet steam region. Afterwards the calculation of the appropriate state region will be carried out.

Wet steam region: Pressure ranges from $p_s(26.85^\circ\text{C}) = 0.001477917$ bar to $p_c = 11.6146$ bar

Results for wrong input values

Result **T_PH_D5, T = -1000** or **t_ph_D5 = -1000** for input values:

Single phase region: $p > 300$ bar or $p < p_s(26.85^\circ\text{C}) = 0.001477917$ bar or
 ($x = -1$) at result $t > 399.85^\circ\text{C}$, $t < 26.85^\circ\text{C}$

Boiling or dew curve: at $p > p_c = 11.6146$ bar or $p < p_s(26.85^\circ\text{C}) = 0.001477917$ bar and
 at result $t > t_c = 346.0846^\circ\text{C}$ or $t < 26.85^\circ\text{C}$

References: [1]

Backward Function: Temperature $t = f(p,s)$

Function Name: **t_ps_D5**

Subroutine with function value:
for call from Fortran **REAL*8 FUNCTION TPSD5(P,S)**
REAL*8 P,S

Subroutine with parameter:
for call from DLL **INTEGER*4 FUNCTION C_TPSD5(T,P,S)**
REAL*8 T,P,S

Input Values:

P - Pressure p in bar
S - Specific entropy s in kJ/(kg K)

Result

TPSD5, T or t_ps_D5 - Temperature t in °C

Range of validity

Temperature range: from $t = 26.85^\circ\text{C}$ to 399.85°C
 Pressure range: from $p = 0.00001$ bar to 300 bar

Details on the calculation of wet steam

The wet steam region is calculated automatically. That means the given values of p and s are taken as a basis and the subprogram will determine whether the state point to be calculated is located within the single-phase region (liquid or steam) or the wet steam region. Afterwards the calculation of the appropriate state region will be carried out.

Wet steam region: Pressure ranges from $p_s(26.85^\circ\text{C}) = 0.001477917$ bar to $p_c = 11.6146$ bar

Results for wrong input values

Result **T_PS_D5, T = -1000** or **t_ps_D5 = -1000** for input values:

Single phase region: $p > 300$ bar or $p < p_s(26.85^\circ\text{C}) = 0.001477917$ bar or
 ($x = -1$) at result $t > 399.85^\circ\text{C}$, $t < 26.85^\circ\text{C}$

Boiling or dew curve: at $p > p_c = 11.6146$ bar or $p < p_s(26.85^\circ\text{C}) = 0.001477917$ bar and
 at result $t > t_c = 346.0846^\circ\text{C}$ or $t < 26.85^\circ\text{C}$

References: [1]

Boiling Temperature $t_s = f(p)$

Function Name:	ts_p_D5
Subroutine with function value: for call from Fortran	REAL*8 FUNCTION TSPD5(P) REAL*8 P
Subroutine with parameter: for call from DLL	INTEGER*4 FUNCTION C_TSPD5(TS,P) REAL*8 TS,P

Input Values:

P - Pressure p in bar

Result

TSPD5, TS or ts_p_D5 - Boiling temperature t_s in °C

Range of validity

Pressure ranges: from $p_s(26.85^\circ\text{C}) = 0.001477917$ bar to $p_c = 11.6146$ bar

Results for wrong input values

Result **TSPD5 = -1000, TS = -1000 or ts_p_D5 = -1000** for input values:

$p < p_s(26.85^\circ\text{C}) = 0.001477917$ bar or $p > p_c = 11.6146$ bar

References: [1]

Specific Internal Energy $u = f(p, t, x)$

Function Name: **u_ptx_D5**

Subroutine with function value:
for call from Fortran **REAL*8 FUNCTION UPTXD5(P,T,X)**
REAL*8 P,T,X

Subroutine with parameter:
for call from DLL **INTEGER*4 FUNCTION C_UPTXD5(U,P,T,X)**
REAL*8 U,P,T,X

Input Values:

P - Pressure p in bar
T - Temperature t in °C
X - Vapor fraction x (kg of saturated steam)/(kg wet steam)

Result

UPTXD5, U or **u_ptx_D5** - Specific internal energy u in kJ/kg

Range of validity

Temperature range: from $t = 26.85^\circ\text{C}$ to 399.85°C
 Pressure range: from $p = 0.00001$ bar to 300 bar

Details on the vapor fraction x and on the calculation of wet steam

The wet steam region is calculated automatically by the subprograms. For this purpose the following fixed details on the vapor fraction x are to be considered:

If the state point to be calculated is located in the single-phase region (liquid or superheated steam) $x = -1$ must be entered as a pro-forma value.

If the state point to be calculated is located in the two phase region (wet steam), either the value 0 or 1 has to be entered for x ($x = 0$ for boiling liquid, $x = 1$ for saturated steam). The calculation for x values between 0 and 1 is not possible.

If the state point to be calculated is located in the two phase region, it is adequate to enter either the given value for t and $p = -1000$, or the given value for p and $t = -1000$, plus the value for x between 0 and 1.

When calculating wet steam and p and t and x are entered as given values, the program will consider p and t to be appropriate to represent the saturation-pressure curve. If it is not the case the calculation for the quantity of the chosen function to be calculated results in -1000.

Wet steam region: Temperature ranges from $t = 26.85^\circ\text{C}$ to $t_c = 346.0846^\circ\text{C}$
 Pressure ranges from $p_s(26.85^\circ\text{C}) = 0.001477917$ bar to $p_c = 11.6146$ bar

Results for wrong input values

Result **UPTXD5 = -1000, U = -1000** or **u_ptx_D5 = -1000** for input values:

Single phase region: $p > 300$ bar or $p < 0.00001$ bar or
 ($x = -1$) $t > 399.85^\circ\text{C}$ or $t < 26.85^\circ\text{C}$

Wet steam region: at $p = -1000$ and $t > t_c = 346.0846^\circ\text{C}$ or $t < 26.85^\circ\text{C}$
 at $t = -1000$ and $p > p_c = 11.6146$ bar
 or $p < p_s(26.85^\circ\text{C}) = 0.001477917$ bar or
 at $p > p_c = 11.6146$ bar or $p < p_s(26.85^\circ\text{C}) = 0.001477917$ bar and
 $t > t_c = 346.0846^\circ\text{C}$ or $t < 26.85^\circ\text{C}$

References: [1]

Specific Volume $v = f(p, t, x)$

Function Name: **v_ptx_D5**

Subroutine with function value: **REAL*8 FUNCTION VPTXD5(P,T,X)**
for call from Fortran **REAL*8 P,T,X**

Subroutine with parameter: **INTEGER*4 FUNCTION C_VPTXD5(V,P,T,X)**
for call from DLL **REAL*8 V,P,T,X**

Input Values:

P - Pressure p in bar
T - Temperature t in °C
X - Vapor fraction x (kg of saturated steam)/(kg wet steam)

Result

VPTXD5, V or v_ptx_D5 - Specific volume v in m³/kg

Range of validity

Temperature range: from $t = 26.85^\circ\text{C}$ to 399.85°C
 Pressure range: from $p = 0.00001$ bar to 300 bar

Details on the vapor fraction x and on the calculation of wet steam

The wet steam region is calculated automatically by the subprograms. For this purpose the following fixed details on the vapor fraction x are to be considered:

If the state point to be calculated is located in the single-phase region (liquid or superheated steam) $x = -1$ must be entered as a pro-forma value.

If the state point to be calculated is located in the two phase region (wet steam), either the value 0 or 1 has to be entered for x ($x = 0$ for boiling liquid, $x = 1$ for saturated steam). The calculation for x values between 0 and 1 is not possible.

If the state point to be calculated is located in the two phase region, it is adequate to enter either the given value for t and $p = -1000$, or the given value for p and $t = -1000$, plus the value for x between 0 and 1.

When calculating wet steam and p and t and x are entered as given values, the program will consider p and t to be appropriate to represent the saturation-pressure curve. If it is not the case the calculation for the quantity of the chosen function to be calculated results in -1000.

Wet steam region: Temperature ranges from $t = 26.85^\circ\text{C}$ to $t_c = 346.0846^\circ\text{C}$
 Pressure ranges from $p_s(26.85^\circ\text{C}) = 0.001477917$ bar to $p_c = 11.6146$ bar

Results for wrong input values

Result **VPTXD5 = -1000, V = -1000 or v_ptx_D5 = -1000** for input values:

Single phase region: $p > 300$ bar or $p < 0.00001$ bar or
 ($x = -1$) $t > 399.85^\circ\text{C}$ or $t < 26.85^\circ\text{C}$

Wet steam region: at $p = -1000$ and $t > t_c = 346.0846^\circ\text{C}$ or $t < 26.85^\circ\text{C}$
 at $t = -1000$ and $p > p_c = 11.6146$ bar
 or $p < p_s(26.85^\circ\text{C}) = 0.001477917$ bar or
 at $p > p_c = 11.6146$ bar or $p < p_s(26.85^\circ\text{C}) = 0.001477917$ bar and
 $t > t_c = 346.0846^\circ\text{C}$ or $t < 26.85^\circ\text{C}$

References: [1]

Isentropic Speed of Sound $w = f(p, t, x)$

Function Name: **w_ptx_D5**

Subroutine with function value:
for call from Fortran **REAL*8 FUNCTION WPTXD5(P,T,X)**
REAL*8 P,T,X

Subroutine with parameter:
for call from DLL **INTEGER*4 FUNCTION C_WPTXD5(W,P,T,X)**
REAL*8 W,P,T,X

Input Values:

P - Pressure p in bar
T - Temperature t in °C
X - Vapor fraction x (kg of saturated steam)/(kg wet steam)

Result

WPTXD5, W or **w_ptx_D5** - Speed of sound w in m/s

Range of validity

Temperature range: from $t = 26.85^\circ\text{C}$ to 399.85°C
 Pressure range: from $p = 0.00001$ bar to 300 bar

Details on the vapor fraction x and on the calculation of wet steam

The wet steam region is calculated automatically by the subprograms. For this purpose the following fixed details on the vapor fraction x are to be considered:

If the state point to be calculated is located in the single-phase region (liquid or superheated steam) $x = -1$ must be entered as a pro-forma value.

If the state point to be calculated is located on the boiling curve, $x = 0$ must be entered. When calculating saturated steam (dew curve) $x = 1$ is entered as given value. The calculation for x values between 0 and 1 is not possible.

If the state point to be calculated is located in the two phase region, it is adequate to enter either the given value for t and $p = -1000$, or the given value for p and $t = -1000$, plus the value for x between 0 and 1. When calculating wet steam and p and t and x are entered as given values, the program will consider p and t to be appropriate to represent the saturation-pressure curve.

Boiling and dew curve: Temperature ranges from $t = 26.85^\circ\text{C}$ to $t_c = 346.0846^\circ\text{C}$
 Pressure ranges from $p_s(26.85^\circ\text{C}) = 0.001477917$ bar to $p_c = 11.6146$ bar

Results for wrong input values

Result **WPTXD5 = -1000, W = -1000** or **w_ptx_D5 = -1000** for input values:

Single phase region:
($x = -1$) $p > 300$ bar or $p < 0.00001$ bar or
 $t > 399.85^\circ\text{C}$ or $t < 26.85^\circ\text{C}$

Boiling or dew curve: at $p = -1000$ and $t > t_c = 346.0846^\circ\text{C}$ or $t < 26.85^\circ\text{C}$
 at $t = -1000$ and $p > p_c = 11.6146$ bar
 or $p < p_s(26.85^\circ\text{C}) = 0.001477917$ bar or
 at $p > p_c = 11.6146$ bar or $p < p_s(26.85^\circ\text{C}) = 0.001477917$ bar and
 $t > t_c = 346.0846^\circ\text{C}$ or $t < 26.85^\circ\text{C}$

References: [1]

Backward Function: Vapor Fraction $x = f(p, h)$

Function Name:	x_ph_D5
Subroutine with function value: for call from Fortran	REAL*8 FUNCTION XPHD5(P,H) REAL*8 P,H
Subroutine with parameter: for call from DLL	INTEGER*4 FUNCTION C_XPHD5(X,P,H) REAL*8 X,P,H

Input Values:

P - Pressure p in bar
H - Specific enthalpy h in kJ/kg

Result

XPHD5, X or x_ph_D5 - Vapor fraction x in (kg saturated steam/kg wet steam)

Range of validity

Temperature range: from $t = 26.85^\circ\text{C}$ to $t_c = 346.0846^\circ\text{C}$
 Pressure range: from $p_s(26.85^\circ\text{C}) = 0.001477917$ bar to $p_c = 11.6146$ bar

Details on the calculation of wet steam

The wet steam region is calculated automatically. That means the given values of p and h are taken as a basis and the subprogram will determine whether the state point to be calculated is located within the single-phase region (liquid or superheated steam) or the wet steam region. In case of wet steam, x will be calculated, otherwise the result is set to $x = -1$.

Wet steam region : Pressure ranges from $p_s(26.85^\circ\text{C}) = 0.001477917$ bar to $p_c = 11.6146$ bar

Results for wrong input values

Result **X_PH_D5 = -1, X = -1 or x_ph_D5 = -1** for input values:

If the state point is located in the single phase region:
 $p > p_c = 11.6146$ bar or $p < 0.001477917$ bar

References: [1]

Backward Function: Vapor Fraction $x = f(p,s)$

Function Name:	x_ps_D5
Subroutine with function value: for call from Fortran	REAL*8 FUNCTION XPSD5(P,S) REAL*8 P,S
Subroutine with parameter: for call from DLL	INTEGER*4 FUNCTION C_XPSD5(X,P,S) REAL*8 X,P,S

Input Values:

P - Pressure p in bar
S - Specific entropy s in kJ/(kg K)

Result

XPSD5, X or **x_ps_D5** - Vapor fraction x in (kg saturated steam/kg wet steam)

Range of validity

Temperature range: from $t = 26.85^\circ\text{C}$ to $t_c = 346.0846^\circ\text{C}$
 Pressure range: from $p_s(26.85^\circ\text{C}) = 0.001477917$ bar to $p_c = 11.6146$ bar

Details on the calculation of wet steam

The wet steam region is calculated automatically. That means the given values of p and h are taken as a basis and the subprogram will determine whether the state point to be calculated is located within the single-phase region (liquid or superheated steam) or the wet steam region. In case of wet steam, x will be calculated, otherwise the result is set to $x = -1$.

Wet steam region : Pressure ranges from $p_s(26.85^\circ\text{C}) = 0.001477917$ bar to $p_c = 11.6146$ bar

Results for wrong input values

Result **X_PS_D5, X = -1** or **x_ps_D5 = -1** for input values:

If the state point is located in the single phase region:
 $p > p_c = 11.6146$ bar or $p < p_s(26.85^\circ\text{C}) = 0.001477917$ bar

References: [1]

Compression Factor $Z = f(p, t, x)$

Function Name:	Z_ptx_D5
Subroutine with function value: for call from Fortran	REAL*8 FUNCTION ZPTXD5(P,T,X) REAL*8 P,T,X
Subroutine with parameter: for call from DLL	INTEGER*4 FUNCTION C_ZPTXD5(Z,P,T,X) REAL*8 Z,P,T,X

Input Values:

P - Pressure p in bar
T - Temperature t in °C
X - Vapor fraction x (kg of saturated steam)/(kg wet steam)

Result

ZPTXD5, Z or Z_ptx_D5 - Speed of sound w in m/s

Range of validity

Temperature range: from $t = 26.85^\circ\text{C}$ to 399.85°C
 Pressure range: from $p = 0.00001$ bar to 300 bar

Details on the vapor fraction x and on the calculation of wet steam

The wet steam region is calculated automatically by the subprograms. For this purpose the following fixed details on the vapor fraction x are to be considered:

If the state point to be calculated is located in the single-phase region (liquid or superheated steam) $x = -1$ must be entered as a pro-forma value.

If the state point to be calculated is located on the boiling curve, $x = 0$ must be entered. When calculating saturated steam (dew curve) $x = 1$ is entered as given value. The calculation for x values between 0 and 1 is not possible.

If the state point to be calculated is located in the two phase region, it is adequate to enter either the given value for t and $p = -1000$, or the given value for p and $t = -1000$, plus the value for x between 0 and 1. When calculating wet steam and p and t and x are entered as given values, the program will consider p and t to be appropriate to represent the saturation-pressure curve.

Boiling and dew curve: Temperature ranges from $t = 26.85^\circ\text{C}$ to $t_c = 346.0846^\circ\text{C}$
 Pressure ranges from $p_s(26.85^\circ\text{C}) = 0.001477917$ bar to $p_c = 11.6146$ bar

Results for wrong input values

Result **ZPTXD5 = -1000, Z = -1000 or Z_ptx_D5 = -1000** for input values:

Single phase region: $p > 300$ bar or $p < 0.00001$ bar or
 ($x = -1$) $t > 399.85^\circ\text{C}$ or $t < 26.85^\circ\text{C}$

Boiling or dew curve: at $p = -1000$ and $t > t_c = 346.0846^\circ\text{C}$ or $t < 26.85^\circ\text{C}$
 at $t = -1000$ and $p > p_c = 11.6146$ bar
 or $p < p_s(26.85^\circ\text{C}) = 0.001477917$ bar or
 at $p > p_c = 11.6146$ bar or $p < p_s(26.85^\circ\text{C}) = 0.001477917$ bar and
 $t > t_c = 346.0846^\circ\text{C}$ or $t < 26.85^\circ\text{C}$


References: [1]

Water and Steam	Humid Combustion Gas Mixtures	Humid Air
Library LibIF97 - Industrial Formulation IAPWS-IF97 (Revision 2007) - Supplementary Standards - IAPWS-IF97-S01 - IAPWS-IF97-S03rev - IAPWS-IF97-S04 - IAPWS-IF97-S05 - IAPWS Revised Advisory Note No. 3 on Thermodynamic Derivatives (2008)	Library LibHuGas Ideal mixture of the real fluids: CO₂ - Span and Wagner O₂ - Schmidt and Wagner H₂O - IAPWS-95 Ar - Tegeler et al. N₂ - Span et al. and of the ideal gases: SO₂, CO, Ne (scientific equations of Bückner et al.) Consideration of Dissociation from VDI 4670 and Poynting effect Library LibIDGAS Ideal gas mixture calculated from the VDI-Guideline 4670	Library LibHuAir Ideal mixture of the real fluids: - Dry air from Lemmon et al. - Steam and water from IAPWS-IF97 Consideration of - Dissociation from VDI-Guideline 4670 - Poynting effect Library LibIdAir Ideal gas mixture calculate from VDI-Guideline 4670


Carbon Dioxide	Ideal Gas Mixtures	Seawater
Library LibCO2 Formulation of Span and Wagner (1994)	Library LibIdGasMix Ideal mixture of the ideal gases: ArSO₂Methane NeH₂Ethane N₂H₂SEthylene O₂OHPropylene COHePropane CO₂F₂Iso-Butane AirNH₃n-Butane NOBenzene H₂OMethanol Consideration of - Dissociation from VDI-Guideline 4670	Library LibSeaWa IAPWS Formulation (2008) and IAPWS-IF97
Hydrogen		Refrigerant R134a Library LibR134a Formulation of Tillner-Roth and Baehr (1994)
Library LibH2 Formulation of Leachman et al. (2007)		
Helium		
Library LibHe Formulation of McCarty and Arp (1990)		
Methanol		Refrigerant NH3
Library LibCH3OH Formulation of de Reuck and Craven (1993)		Library LibNH3 Formulation of Tillner-Roth (1995)

ORC Working Fluids	Mixtures for Absorption Processes	Refrigerants
Library LibMM Siloxane C₆H₁₈OSi₂ (MM) Formulation of Colonna et al. (2006) Library LibD4 Siloxane C₈H₂₄O₄Si₄ (D4) Formulation of Colonna et al. (2006) Library LibD5 Siloxane C₁₀H₃₀O₅Si₅ (D5) Formulation of Colonna et al. (2006) Library LibMD4M Siloxane C₁₄H₄₂O₅Si₆ (MD4M) Formulation of Colonna et al. (2006)	Library LibAmWa Ammonia/Water Mixtures IAPWS Guideline 2005 of Tillner-Roth and Friend (1998) Helmholtz energy formulation for the mixing term Library LibWaLi Water/Lithium Bromide Mixtures Formulation of Kim and Infante Ferreira (2004) Gibbs energy equation for the mixing term	Library LibPropan Refrigerant Propane Formulation of Lemmon et al. (2008) Library LibButan_Iso Refrigerant Iso-Butane Formulation of Bückner et al. (2003) Library LibButan_n Refrigerant n-Butane Formulation of Bückner et al. (2003)

Using the Add-In FluidEXL a direct call of the property functions in Excel® is possible.

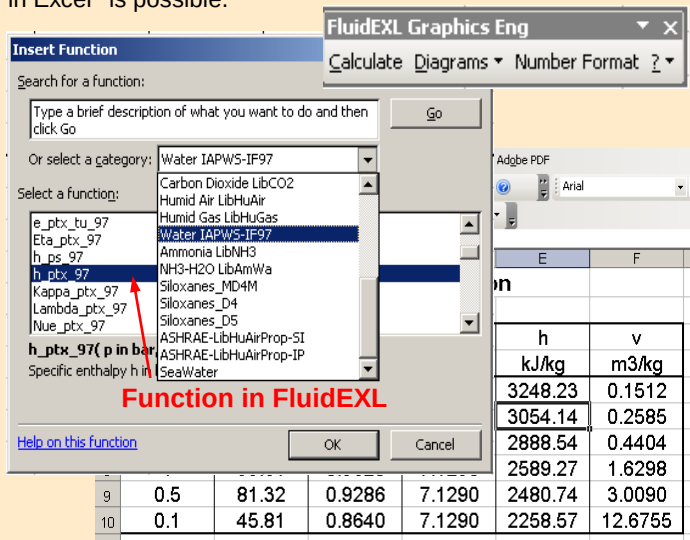


The Add-In FluidEES allows to call the functions of the property libraries within the Engineering Equation Solver EES®.

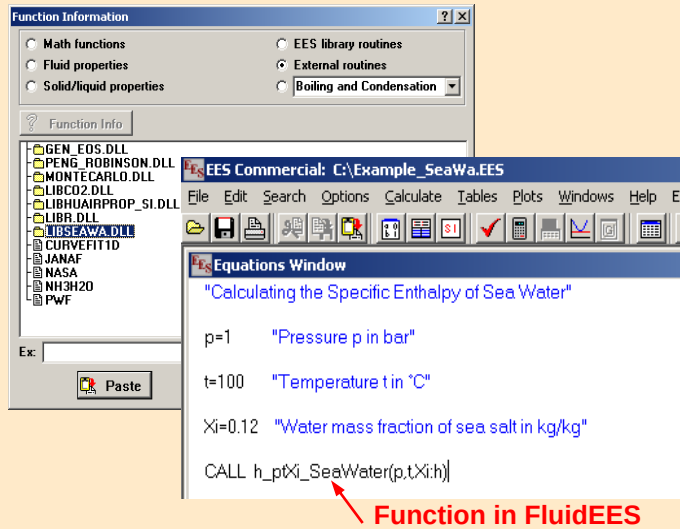


Add-In FluidMAT for Mathcad®

Using the Add-on FluidMAT, the functions of the property libraries can be used in Mathcad®.

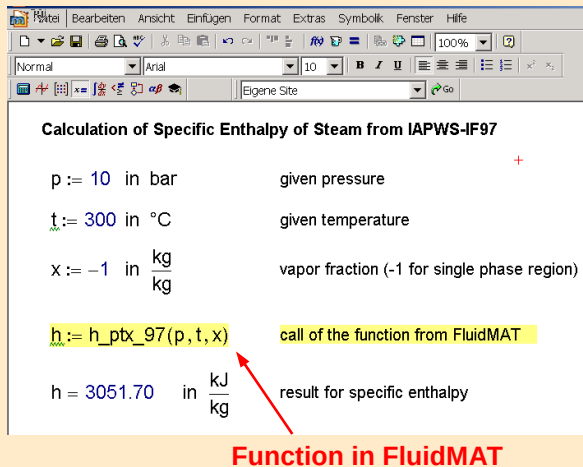

Add-In FluidLAB for MATLAB®

The property functions can be called in MATLAB®.

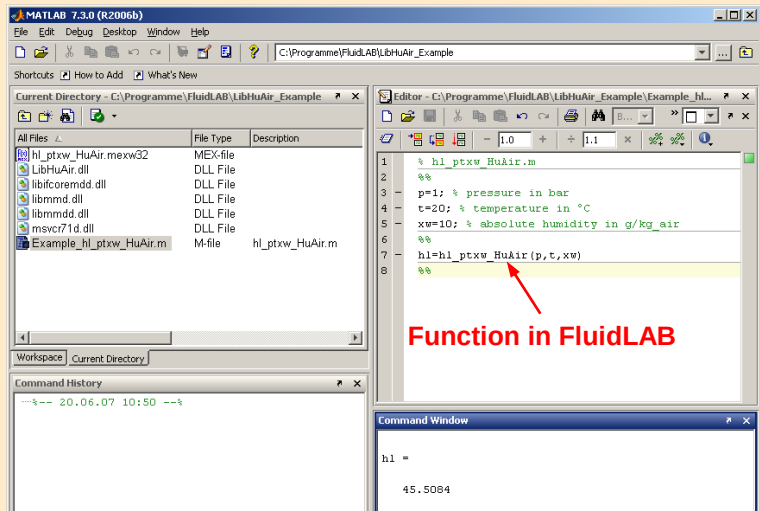

The following thermodynamic and transport properties can be calculated¹:

Thermodynamic Properties

- Saturation pressure p_s
- Saturation temperature T_s
- Density ρ
- Specific volume v
- Enthalpy h
- Internal energy u
- Entropy s
- Exergy e

- Isobaric heat capacity c_p
- Isochoric heat capacity c_v
- Isentropic exponent κ
- Speed of sound w
- Surface tension σ

Thermodynamic Derivatives

- Partial derivatives can be calculated

Transport Properties

- Dynamic viscosity η
- Kinematic viscosity ν
- Thermal conductivity λ
- Prandtl-number Pr

Backward Functions

- $T, v, s(p, h)$
- $T, v, h(p, s)$
- $p, T(v, h)$
- $p, T(v, u)$
- $p, T, v(h, s)$

For information please contact:

Zittau/Goerlitz University of Applied Sciences
Department of Technical Thermodynamics
Prof. Hans-Joachim Kretzschmar
Dr. Ines Stoecker
Theodor-Koerner-Allee 16
02763 Zittau, Germany

E-mail: hj.kretzschmar@hs-zigr.de
Internet: www.thermodynamics-zittau.de
Phone: +49-3583-61-1846
Fax.: +49-3583-61-1846

¹ Not all of these property functions are available in all property libraries listed before.

5. References

- [1] Colonna, P.; Nannan, N. R.; Guardone, A.; Lemmon, E. W.
Multiparameter equations of state for selected siloxanes
Fluid Phase Equilibria, 244, (2006) S. 193-211

6. Satisfied Customers

Date: 12/2008

The following companies and institutions use the property libraries in Excel®, MATLAB®, Engineering Equation Solver®, Mathcad®, and/or Dymola®:

1997

Gerb Dresden	06/1997
Siemens Power Generation Goerlitz	07/1997

1998

Technical University of Cottbus, Chair in Power Plant Engineering	05/1998
Fichtner Consulting & IT (CADIS information systems) Stuttgart (general KPRO program license)	05/1998
M&M Turbine Technology Bielefeld	06/1998
B+H Software Engineering Stuttgart	08/1998
Alfa Engineering, Switzerland	09/1998
VEAG Berlin (group license)	09/1998
NUTEC Engineering Bisikon, Switzerland	10/1998
SCA Hygiene Products Munich	10/1998
RWE Energie Neurath	10/1998
Wilhelmshaven University of Applied Sciences	10/1998
BASF Ludwigshafen (group license)	11/1998
EVO, Energieversorgung Offenbach (Offenbach Energy Utilities Company)	11/1998

1999

Bayernwerk Munich (power supply company)	01/1999
DREWAG Dresden (company license)	02/1999
KEMA IEV Dresden	03/1999
Regensburg University of Applied Sciences	04/1999
Fichtner Consulting & IT Stuttgart (company licenses and distribution)	07/1999
Technical University of Cottbus, Chair in Power Plant Engineering	07/1999
Technical University of Graz, Department of Thermal Engineering, Austria	11/1999
Ostendorf Engineering Gummersbach	12/1999

2000

SOFBID Zwingenberg (general EBSILON program license)	01/2000
AG KKK - PGW Turbo Leipzig	01/2000

PREUSSAG NOELL Wuerzburg	01/2000
M&M Turbine Technology Bielefeld	01/2000
IBR Engineering Reis Nittendorf-Undorf	02/2000
GK Hannover	03/2000
KRUPP-UHDE Dortmund (company license)	03/2000
UMAG W. UDE Husum	03/2000
VEAG Berlin (group license)	03/2000
Thinius Erkrath Engineering	04/2000
SaarEnergie Saarbruecken	05/2000, 08/2001
DVO Data Processing Service Oberhausen	05/2000
Aachen University of Applied Sciences	06/2000
VAUP Process Automation Landau	08/2000
Knuerr-Lommatec Lommatzsch	09/2000
AVACON Helmstedt	10/2000
Compania Electrica Bogota, Colombia	10/2000
G.U.N.T. Geraetebau (toolbuilding) Barsbuettel (general license for training test benches)	11/2000
Steinhaus Informationssysteme Datteln (general license for process data software)	12/2000

2001

ALSTOM Power Baden, Switzerland	01/2001, 06/2001, 12/2001
KW2 B. V. Amersfoot, Netherlands	01/2001, 11/2001
Eco Design Saitamaken, Japan	01/2001
M&M Turbine Technology Bielefeld	01/2001, 09/2001
MVV Energie Mannheim	02/2001
Technical University of Dresden, Department of Power Machinery and Plants	02/2001
PREUSSAG NOELL, Wuerzburg	03/2001
Fichtner Consulting & IT Stuttgart (company licenses and distribution)	04/2001
Muenstermann GmbH Telgte-Westbevern	05/2001
SaarEnergie Saarbruecken	05/2001
Siemens Karlsruhe (general license for the WinIS information system)	08/2001
Neusiedler AG Ulmerfeld, Austria	09/2001
h s energieanlagen (energy systems), Freising	09/2001
Electrowatt-EKONO Zurich, Switzerland	09/2001

IPM Zittau (general license)	10/2001
eta Energieberatung Pfaffenhofen	11/2001
ALSTOM Power Baden, Switzerland	12/2001
VEAG Berlin (group license)	12/2001,
2002	
Hamilton Medical AG Rhaezuens, Switzerland	01/2002
Bochum University of Applied Sciences, Department of Thermo- and Fluid Dynamics	01/2002
SAAS Possendorf/Dresden	02/2002
Siemens Karlsruhe (general license for the WinIS information system)	02/2002
FZR Forschungszentrum Rossendorf/Dresden	03/2002
CompAir Simmern	03/2002
GKS Gemeinschaftskraftwerk Schweinfurt	04/2002
ALSTOM Power Baden, Switzerland (group licenses)	05/2002
InfraServ Gendorf	05/2002
SoftSolutions Muehlhausen (company license)	05/2002
DREWAG Dresden (company license)	05/2002
SOFBID Zwingenberg (general EBSILON program license)	06/2002
Kleemann Engineering Dresden	06/2002
Caliqua Basel, Switzerland (company license)	07/2002
PCK Raffinerie Schwedt (group license)	07/2002
Fischer-Uhrig Engineering, Berlin	08/2002
Fichtner Consulting & IT Stuttgart (company licenses and distribution)	08/2002
Stadtwerke Duisburg (public utilities company)	08/2002
Stadtwerke Hannover (public utilities company)	09/2002
Siemens Power Generation Goerlitz	10/2002
Energieversorgung (Energy Utilities Company) Halle (company license)	10/2002
Bayer Leverkusen	11/2002
Dillinger Huette (iron works) Dillingen	11/2002
G.U.N.T. Geraetebau (toolbuilding) Barsbuettel (general license and training test benches)	12/2002
VEAG Berlin (group license)	12/2002

2003

Utzenstorf Paper Factory, Switzerland	01/2003
MAB Plant Engineering Vienna, Austria	01/2003
Wulff Energy Systems Husum	01/2003
Technip Benelux BV Zoetermeer, Netherlands	01/2003
ALSTOM Power Baden, Switzerland	01/2003, 07/2003
VER Dresden	02/2003
Rietschle Energieplaner (energy consulting, planning) Winterthur, Switzerland	02/2003
DLR Leupholdhausen	04/2003
Emden University of Applied Sciences, Department of Technology	05/2003
Pettersson+Ahrends Ober-Moerlen	05/2003
SOFBID Zwingenberg (general EBSILON program license)	05/2003
Ostendorf Engineering Gummersbach	05/2003
TUEV Nord Hamburg	06/2003
Muenstermann GmbH Telgte-Westbevern	06/2003
University of Cali, Colombia	07/2003
Atlas-Stord Rodovre, Denmark	08/2003
ENERKO Aldenhoven	08/2003
STEAG RKB Leuna	08/2003
eta Energieberatung Pfaffenhofen	08/2003
exergie Dresden	09/2003
AWTEC Zurich, Switzerland	09/2003
Energie Timelkam, Austria	09/2003
Electrowatt-EKONO Zurich, Switzerland	09/2003
LG Annaberg-Buchholz	10/2003
FZR Forschungszentrum Rossendorf/Dresden	10/2003
EnviCon & Plant Engineering Nuernberg	11/2003
Visteon Kerpen	11/2003
VEO Vulkan Energiewirtschaft (energy management) Oderbruecke Eisenhuettenstadt	11/2003
Stadtwerke Hannover (public utilities company)	11/2003
SaarEnergie Saarbruecken	11/2003
Fraunhofer-Gesellschaft, Munich	12/2003
Erfurt University of Applied Sciences, Department of Supply Engineering	12/2003

SorTech Freiburg	12/2003
Mainova Frankfurt	12/2003
Energieversorgung Halle (company license)	12/2003
2004	
Vattenfall Europe (group license)	01/2004
TUEV Nord Hamburg	01/2004
University of Stuttgart, Institute of Thermodynamics and Heat Engineering	02/2004
MAN B&W Diesel A/S Copenhagen, Denmark	02/2004
Siemens AG Power Generation Erlangen	02/2004
Ulm University of Applied Sciences	03/2004
Visteon Kerpen	03/2004, 10/2004
Technical University of Dresden, Professorship of Thermic Energy Machines and Plants	04/2004
Rerum Cognitio Zwickau	04/2004
University of Saarbruecken	04/2004
Grenzebach BSH Bad Hersfeld	04/2004
SOFBID Zwingenberg (general EBSILON program license)	04/2004
EnBW Energy Solutions Stuttgart	05/2004
HEW-Kraftwerk Tiefstack	06/2004
h s energieanlagen (energy systems) Freising	07/2004
FCIT Stuttgart	08/2004
Physikalisch Technische Bundesanstalt (PTB) Braunschweig	08/2004
Mainova Frankfurt	08/2004
Rietschle Energieplaner (energy consulting, planning) Winterthur, Switzerland	08/2004
MAN Turbo Machines Oberhausen	09/2004
TUEV Sued Dresden	10/2004
STEAG Kraftwerk (power plant) Herne	10/2004, 12/2004
University of Weimar	10/2004
energeticals (e-concept) Munich	11/2004
SorTech Halle	11/2004
Enertech EUT Radebeul (company license)	11/2004
Munich University of Applied Sciences	12/2004
STORA ENSO Sachsen Eilenburg	12/2004
Technical University of Cottbus, Chair in Power Plant Engineering	12/2004
Freudenberg Service Weinheim	12/2004

2005

TUEV NORD Hannover	01/2005
J.H.K Plant Engineering and Service Bremerhaven	01/2005
Electrowatt-EKONO Zurich, Switzerland	01/2005
FCIT Stuttgart	01/2005
Energietechnik Leipzig (power engineering, company license)	02/2005, 04/2005, 07/2005
eta Energieberatung (energy consulting) Pfaffenhofen	02/2005
FZR Forschungszentrum (Research Center) Rossendorf/Dresden	04/2005
University of Saarbruecken	04/2005
Technical University of Dresden	
Professorship of Thermic Energy Machines and Plants	04/2005
Grenzebach BSH Bad Hersfeld	04/2005
TUEV Nord Hamburg	04/2005
Technical University of Dresden, Waste Management	05/2005
Siemens Power Generation Goerlitz	05/2005
Duesseldorf University of Applied Sciences, Department of Mechanical Engineering and Process Engineering	05/2005
Redacom Nidau, Switzerland	06/2005
Dumas Verfahrenstechnik Hofheim	06/2005
Alensys Engineering Erkner	07/2005
Stadtwerke Leipzig (public utilities company)	07/2005
SaarEnergie Saarbruecken	07/2005
ALSTOM ITC Rugby, Great Britain	08/2005
Technical University of Cottbus, Chair in Power Plant Engineering	08/2005
Vattenfall Europe Berlin (group license)	08/2005
Technical University of Berlin	10/2005
Basel University of Applied Sciences, Department of Mechanical Engineering, Switzerland	10/2005
Midiplan Bietigheim-Bissingen	11/2005
Technical University of Freiberg, Chair in Hydrogeology	11/2005
STORA ENSO Sachsen Eilenburg	12/2005
Energieversorgung Halle (energy provider; company license)	12/2005
KEMA IEV Dresden	12/2005

2006

STORA ENSO Sachsen Eilenburg	01/2006
------------------------------	---------

Technical University of Munich, Chair in Energy Systems	01/2006
NUTEC Engineering Bisikon, Switzerland	01/2006, 04/2006
Conwel eco Bochoř, Czech Republic	01/2006
Offenburg University of Applied Sciences	01/2006
KOCH Transporttechnik Wadgassen (transportation technology)	01/2006
BEG Bremerhavener Entsorgungsgesellschaft (waste disposal company)	02/2006
Deggendorf University of Applied Sciences, Department of Mechanical Engineering and Mechatronics	02/2006
University of Stuttgart, Department of Thermal Fluid Flow Engines	02/2006
Technical University of Munich, Chair in Apparatus and Plant Engineering	02/2006
Energietechnik Leipzig (energy technology), (company license)	02/2006
Siemens Power Generation Erlangen	02/2006, 03/2006
RWE Power Essen	03/2006
WAETAS Poberschau	04/2006
Siemens Power Generation Goerlitz	04/2006
Technical University of Braunschweig, Department of Thermodynamics	04/2006
EnviCon & Plant Engineering Nuernberg	04/2006
Brassel Engineering, Dresden	05/2006
University of Halle-Merseburg, Department of USET Merseburg incorporated society	05/2006
Technical University of Dresden, Professorship of Thermic Energy Machines and Plants	05/2006
Fichtner Consulting & IT Stuttgart (company licenses and distribution)	05/2006
Suedzucker Ochsenfurt (sugar manufacturing)	06/2006
M&M Turbine Technology Bielefeld	06/2006
Feistel Engineering Volkach	07/2006
ThyssenKrupp Marine Systems Kiel	07/2006
Caliqua Basel, Switzerland (company license)	09/2006
Atlas-Stord Rodovre, Denmark	09/2006
Konstanz University of Applied Sciences, Course of Studies Construction and Development	10/2006
Siemens Power Generation Duisburg	10/2006

Hannover University of Applied Sciences, Department of Mechanical Engineering	10/2006
Siemens Power Generation Berlin	11/2006
Zikesch Armaturentechnik Essen	11/2006
Wismar University of Applied Sciences, Seafaring Department	11/2006
BASF Schwarzheide	12/2006
Enertech Energie und Technik Radebeul	12/2006

2007

Audi Ingolstadt	02/2007
ANO Abfallbehandlung Nord Bremen (waste treatment)	02/2007
TUEV NORD SysTec Hamburg	02/2007
VER Dresden	02/2007
Technical University of Dresden, Chair in Jet Propulsion Systems	02/2007
Redacom Nidau, Switzerland	02/2007
Universität der Bundeswehr, Munich (Armed Forces University)	02/2007
Maxxtec Sinsheim	03/2007
University of Rostock, Chair in Technical Thermodynamics	03/2007
AGO Kulmbach	03/2007
University of Stuttgart, Chair in Aviation Propulsions	03/2007
Siemens Power Generation Duisburg	03/2007
ENTHAL Haustechnik Rees (building services)	05/2007
AWECO Neukirch	05/2007
ALSTOM Rugby, Great Britain	06/2007
SAAS Possendorf	06/2007
Grenzebach BSH Bad Hersfeld	06/2007
Reichel Engineering Haan	06/2007
Technical University of Cottbus, Chair in Power Plant Engineering	06/2007
Voith Paper Air Systems Bayreuth	06/2007
Egger Holzwerkstoffe Wismar	06/2007
Tissue Europe Technologie Mannheim	06/2007
Dometic Siegen	07/2007
Technical University of Aachen, Institute for Electrophysics (registered society)	09/2007
National Energy Technology Laboratory Pittsburg, USA	10/2007

Energieversorgung Halle (energy supplier)	10/2007
AL-KO Jettingen	10/2007
Grenzebach BSH Bad Hersfeld	10/2007
Wiesbaden University of Applied Sciences, Department of Engineering Sciences	10/2007
Endress+Hauser Messtechnik Hannover (measurement and test engineering)	11/2007
Munich University of Applied Sciences, Department of Mechanical Engineering	11/2007
Rerum Cognitio Zwickau	12/2007
Siemens Power Generation Erlangen	11/2007
University of Rostock, Chair in Technical Thermodynamics	11/2007, 12/2007

2008

Pink Langenwang	01/2008
Fischer-Uhrig Berlin	01/2008
University of Karlsruhe	01/2008
MAAG Kuesnacht, Switzerland	02/2008
M&M Turbine Technology Bielefeld	02/2008
Lentjes Ratingen	03/2008
Siemens Power Generation Goerlitz	04/2008
Evonik Zwingenberg (general EBSILON program license)	04/2008
WEBASTO Neubrandenburg	04/2008
CFC Solutions Munich	04/2008
RWE IT Essen	04/2008
Rerum Cognitio Zwickau	04/2008, 05/2008
ARUP Berlin	05/2008
Research Center Karlsruhe	07/2008
AWECO Neukirch	07/2008
Technical University of Dresden, Professorship of Building Services	07/2008
Technical University of Cottbus, Chair in Power Plant Engineering	07/2008, 10/2008
Ingersoll-Rand Unicov, Czech Republic	08/2008
Technip Benelux BV Zoetermeer, Netherlands	08/2008
Fennovoima Oy Helsinki, Finland	08/2008
Fichtner Consulting & IT Stuttgart	09/2008
PEU Espenhain	09/2008

Poyry Dresden	09/2008
WINGAS Kassel	09/2008
TUEV Sued Dresden	10/2008
Technical University of Dresden, Professorship of Thermic Energy Machines and Plants	10/2008, 11/2008
AWTEC Zurich, Switzerland	11/2008
Siemens Power Generation Erlangen	12/2008